

WSHN-XEE2 MF 10.2 - 120.2

Water cooled heat pump for indoors installation



Dear Customer,

We congratulate you on choosing this product

For many years Clivet has been offering systems that provide maximum comfort, together with high reliability, efficiency, quality and safety.

The aim of the company is to offer advanced systems, that assure the best comfort, reduce energy consumption and the installation and maintenance cost for the life cycle of the system.

The purpose of this manual is to provide you with information that is useful from reception of the equipment, through installation, operational usage and finally disposal so that this advanced system offers the best solution.

Yours faithfully.

CLIVET Spa

The data contained in this manual is not binding and may be changed by the manufacturer without prior notice.

Reproduction, even in part, is FORBIDDEN © Copyright - CLIVET S.p.A. - Feltre (BL) - Italia

Index of contents

1	General description	4
2	Reception	6
3	Positioning	8
4	Water connections	9
5	Electrical connections	12
6	Start-up	18
7	Control	28
8	Maintenance	40
9	Accessories	44
10	Decommissioning	50
11	Residual risks	51
12	Technical information	52
13	Dimensional drawings	60

1 General description

1.1 Manual

The manual provides correct unit installation, use and maintenance.

Pay particular attention to:



Warning, identifies particularly important operations or information.



Prohibited operations that must not be carried out, that compromise the operating of the unit or may cause damage to persons or things.

- It is advisable to read it carefully so you will save time during operations.
- Follow the written indications so you will not cause damages to things and injuries people.

1.2 Preliminaries

Only qualified personnel can operate on the unit, as required by the regulation in force.

1.3 Risk situations



The unit has been designed and created to prevent injuries to people.

During designing it is not possible to plane and operate on all risk situation.

Read carefully "Residual risk" section where all situation which may cause damages to things and injuries to people are reported.

Installation, starting, maintenance and repair required specific knowledge; if they are carried out by inexperienced personnel, they may cause damages to things and injuries people.

1.4 Intended use

Use the unit only:

- for cooling/heating water or a water and glycol mix
- keep to the limits foreseen in the technical schedule and in this manual

The manufacturer accepts no responsibility if the equipment is used for any purpose other than the intended use.

1.5 Installation

Outdoor installation



The positioning, hydraulic system, refrigerating, electrics and the ducting of the air must be determined by the system designer in accordance with local regulations in force.

Follow local safety regulations.

Verify that the electrical line characteristics are in compliance with data quotes on the unit serial number label.

1.6 Maintenance

Plan periodic inspection and maintenance in order to avoid or reduce repairing costs.



Turn the unit off before any operation.

1.7 Modification



All unit modifications will end the warranty coverage and the manufacturer responsibility.

1.8 Breakdown/Malfuction

Disable the unit immediately in case of breakdown or malfunction.

Contact a certified service agent.

Use original spares parts only.

Using the unit in case of breakdown or malfunction:

- voids the warranty
- it may compromise the safety of the unit
- may increase time and repair costs

1.9 User training



The installer has to train the user on:

- Start-up/shutdown
- Set points change
- Standby mode
- Maintenance
- What to do / what not to do in case of breakdown

1.10 Data update

Continual product improvements may imply manual data changes.

Visit manufacturer web site for updated data.

1.11 Indications for the User



Keep this manual with the wiring diagram in an accessible place for the operator.

Note the unit data label so you can provide them to the assistance centre in case of intervention (see "Unit identification" section).

Provide a unit notebook that allows any interventions carried out on the unit to be noted and tracked making it easier to suitably note the various interventions and aids the search for any breakdowns.

In case of breakdown or malfunction:

- Immediately deactivate the unit
- Contact a service centre authorized by the manufacturer



The installer must train the user, particularly on:

- Start-up/shutdown
- Set points change
- Standby mode
- Maintenance
- What to do / what not to do in case of breakdown

1.12 Unit identification

The serial number label is positioned on the unit and allows to identify all the unit features.

The matriculation plate shows the indications foreseen by the standards, in particular:

- unit type
- serial number (12 characters)
- year of manufacture
- wiring diagram number
- electrical data
- type of refrigerant
- refrigerant charge
- manufacturer logo and address



The matriculation plate must never be removed.



It contains fluorinated greenhouse gases

Type of refrigerant: R410A

1.13 Serial number

It identifies uniquely each unit.

Must be quoted when ordering spare parts.

1.14 Assistance request

Note data from the serial number label and write them in the chart on side, so you will find them easily when needed.

Series
Size
Serial number
Year of manufacture
Electrical wiring diagram

2 Reception



You have to check before accepting the delivery:

- That the unit hasn't been damaged during transport
- That the materials delivered correspond with that indicated on the transport document comparing the data with the identification label positioned on the packaging.

In case of damage or anomaly:

- Write down on the transport document the damage you found and quote this sentence: "Conditional acceptance clear evidence of deficiencies/damages during transport"
- Contact by fax and registered mail with advice of receipt to supplier and the carrier.




Any disputes must be made within 8 days from the date of the delivery. Complaints after this period are invalid.

2.1 Storage

Observe external packaging instructions.

2.2 Handling

1. Verify unit weight and handling equipment lifting capacity.
2. Identify critical points during handling (disconnected routes, flights, steps, doors).
3. Suitably protect the unit to prevent damage.
4. lifting brackets
5. Lifting with balance
6. Lifting with spacer bar
7. Align the barycenter to the lifting point
8. Use all the lifting brackets (see the dimensional section)
9. Gradually bring the lifting belts under tension, making sure they are positioned correctly.
10. Before starting the handling, make sure that the unit is stable.

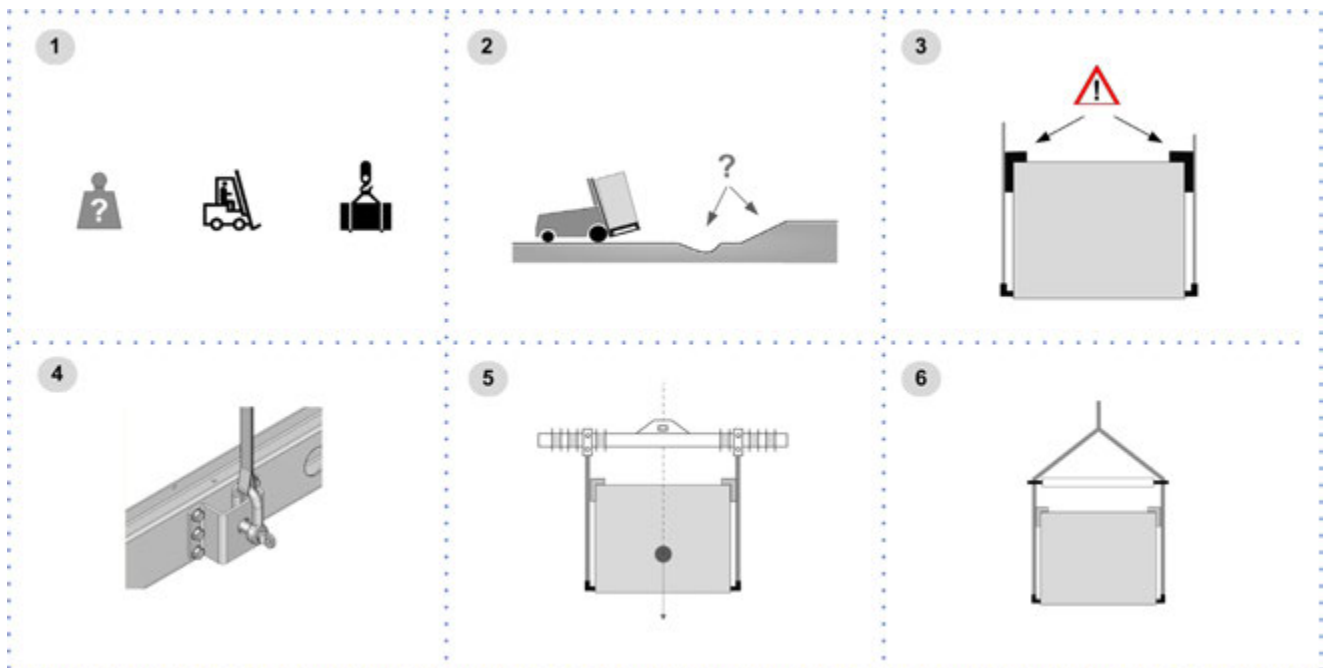


2.3 Packaging removing

Be careful not to damage the unit.

Keep packing material out of children's reach it may be dangerous.

Recycle and dispose of the packaging material in conformity with local regulations.

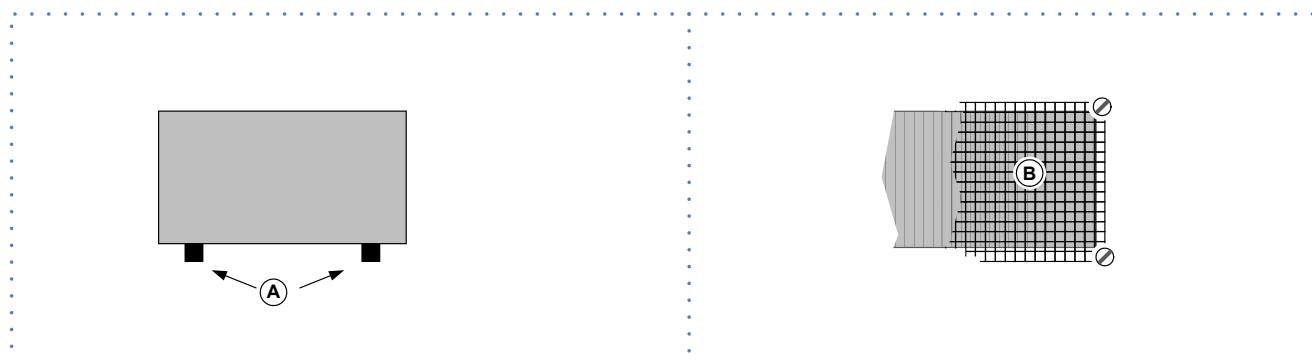

A Supports for handling: remove after the handling.

B Remove the coil protective mesh before the start-up

3 Positioning

During positioning consider these elements:

- Technical spaces requested by the unit
- Electrical connections
- Water connections
- Spaces for air exhaust and intake

3.1 Functional spaces

Functional spaces are designed to:

- guarantee good unit operation
- carry out maintenance operations
- protect authorized operators and exposed people

Respect all functional spaces indicated in the DIMENSIONS section.

Double all functional spaces if two or more unit are aligned.

3.2 Positioning



Units are designed to be installed:

- INTERNAL
- in fixed positions

Limit vibration transmission:

- use antivibration devices on unit bearing points
- install flexible joints on the hydraulic connections

Choose the installation place according to the following criteria:

- Customer approval
- safe accessible position
- technical spaces requested by the unit
- max. distance allowed by the electrical connections
- Avoid installations in places subject to flooding
- verify unit weight and bearing point capacity
- verify that all bearing points are aligned and leveled

3.3 Safety valve gas side

The installer is responsible for evaluating the opportunity of installing drain tubes, in conformity with the local regulations in force (EN 378).

4 Water connections

4.1 Water quality

Water features

- confirming to local regulations
- total hardness < 14°fr
- within the limits indicated by table

The water quality must be checked by qualified personnel.

Water with inadequate characteristics can cause:

- pressure drop increase
- reduces energy efficiency
- increased corrosion potential

Acceptable water quality values:

PH	7,5 ÷ 9,0	
SO ₄ ²⁻	< 100	ppm
HCO ₃ ⁻ /SO ₄ ²⁻	> 1	
Total Hardness	4,5 ÷ 8,5	dH
Cl ⁻	< 50	ppm
PO ₄ ³⁻	< 2,0	ppm
NH ₃	< 0,5	ppm

Free Chlorine	< 0,5	ppm
Fe ₃ ⁺	< 0,5	ppm
Mn ⁺⁺	< 0,05	ppm
CO ₂	< 50	ppm
H ₂ S	< 50	ppb
Temperature	< 65	°C
Oxygen content	< 0,1	ppm

Provide a water treatment system if values fall outside the limits.



The warranty does not cover damages caused by limestone formations, deposits and impurities from the water supply and / or failure from failed system clearing to clean system.

4.2 Risk of freezing

If the unit or the relative water connections are subject to temperatures close to 0°C:

- mix water with glycol, or
- safeguard the pipes with heating cables placed under the insulation, or
- empty the system in cases of long non-use

4.3 Anti-freeze solution

The use of an anti-freeze solution results in an increase in pressure drop.



Make sure that the glycol type utilized is inhibited (not corrosive) and compatible with the water circuit components.



Do not use different glycol mixture (i.e. ethylene with propylene).

4.4 Water flow-rate

The project water-flow must be:

- inside the exchanger operating limits (see the TECHNICAL INFORMATION section)
- guarantee, also with variable system conditions (for example in systems where some circuits are bypassed in particular situations).

4.5 Hydraulic connections

- take away the supplied connection union by acting on the connection joint
- weld the union to the installation pipe
- perform the connection between the installation pipe and the evaporator, using the joint



Do not weld the system pipe with the Victaulic connection joint attached.




The rubber gasket might be irreparably damaged.

4.6 Recommended connection



The installer must define:

- component type
- position in system

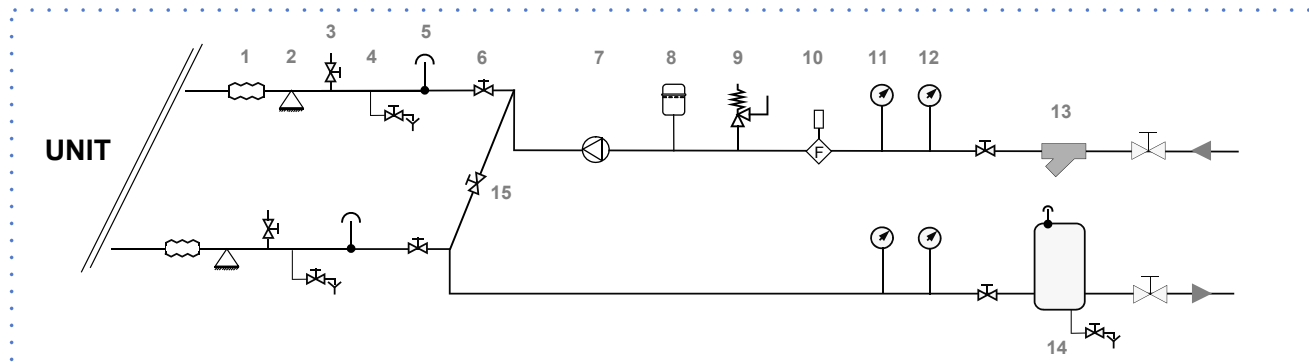

- | | | | |
|---|------------------------------------|----|------------------------|
| 1 | antivibration joints | 9 | safety valve |
| 2 | piping support | 10 | Flow Switch |
| 3 | exchanger chemical cleaning bypass | 11 | pressure gauge |
| 4 | drain valve | 12 | thermometer |
| 5 | vent | 13 | filter |
| 6 | shut-off valve | 14 | Internal storage tank |
| 7 | Pump / circulating pump | 15 | Cleaning system bypass |
| 8 | expansion vessel | | |

4.7 Water filter

Use filter with mesh pitch:

Size	Mesh pitch
10.2 - 22.2	0,5 mm
27.2 - 90.2	1,5 mm
100.2 - 120.2	1,6 mm



It must be installed immediately in the water input of the unit, in a position that is easily accessible for cleaning.




The filter never should be removed, this operation invalidates the guaranty.

4.8 Flow Switch



The flow switch must be present to ensure shutdown of the unit if water is not circulating.

It has to be installed in a duct rectilinear part, not in proximity of curves that cause turbulences.

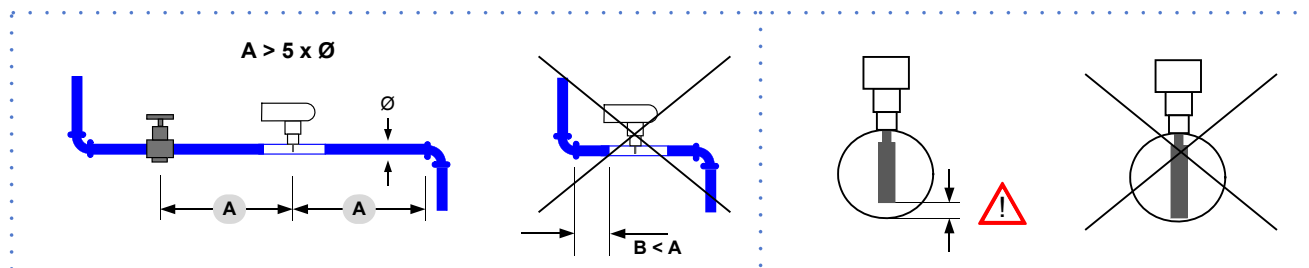

A. minimum distance

4.9 Operation sequence

Close all vent valves in the high points of the unit hydraulic circuit

Close all drain valves in the low points of the unit hydraulic circuit:

- Heat exchangers
 - Pumps
 - collectors
 - storage tank
 - free-cooling coil
1. Carefully wash the system with clean water: fill and drain the system several times.
 2. Apply additives to prevent corrosion, fouling, formation of mud and algae.
 3. Fill the plant
 4. Execute leakage test.
 5. Isolate the pipes to avoid heat dispersions and formation of condensate.
 6. Leave various point of service free (wells, vent-holes etc).



Neglecting the washing will lead to several filter cleaning interventions and at worst cases can cause damages to the exchangers and the other parts.

4.10 hydronic assembly

For details see:

9 Accessories p. 44

4.11 VALVE FOR DOMESTIC HOT WATER

For details see:

9 Accessories p. 44

4.12 NATURAL COOLING function

For details see:

9.7 NATURAL COOLING function p. 49

4.13 Energy recovery

Option

A configuration which enables the production of hot water free-of-charge while operating in the cooling mode, thanks to the partial recovery of condensation heat that would otherwise be rejected to the external heat source.


The maximum capacity available from the partial recovery is equal to the 15% of the rejected heating capacity (cooling capacity + compressor power input)



The recovery exchanger must be always maintained full of water

The lack of water amplifies the noise generated by the operation

When the temperature of the water to be heated is particularly low, it is wise to insert a flow-rate control valve into the system water circuit, in order to maintain the temperature at the recovery output at above 35°C and thus avoid the condensation of the refrigerant into the partial energy recovery device.

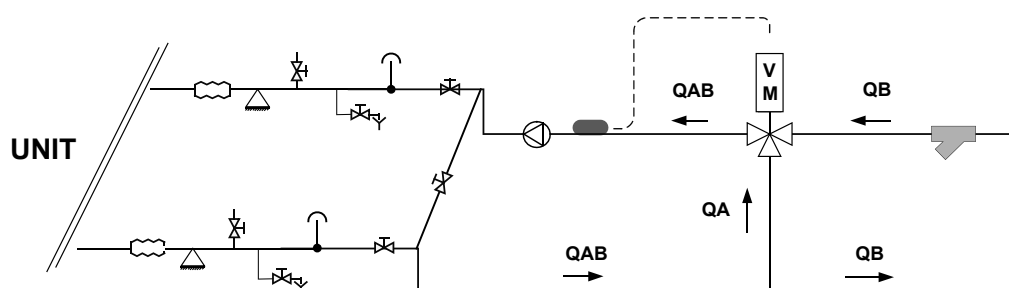

5 Electrical connections

The characteristics of the electrical lines must be determined by qualified electrica personnel able to design electrical installations; moreover, the lines must be in conformity with regulations in force.

The protection devices of the unit power line must be able to stop all short circuit current, the value must be determined in accordance with system features.

The power cables and the protection cable section must be defined in accordance with the characteristics of the protections adopted.

All electrical operations should be performed by trained personnel having the necessary qualifications required by the regulations in force and being informed about the risks relevant to these activities.

Operate in compliance with safety regulations in force.

5.1 Electrical data



The serial number label reports the unit specific electrical data, included any electrical accessories.

The electrical data indicated in the technical bulletin and in the manual refer to the standard unit, accessories excluded.

The matriculation plate shows the indications foreseen by the standards, in particular:

- Voltage
- F.L.A.: full load ampere, absorbed current at maximum admitted conditions
- F.L.I.: full load input, full load power input at max. admissible condition
- Electrical wiring diagram Nr.

5.2 Connections

1. Refer to the unit electrical diagram (the number of the diagram is shown on the serial number label).
2. Verify that the electrical supply has characteristics conforming to the data shown on the serial number label.
3. Before starting work, ensure the unit is isolated, unable to be turned on and a safety sign used.
4. Ensure correct earth connection.
5. Ensure cables are suitably protected.
6. Before powering up the unit, make sure that all the protections that were removed during the electrical connection work have been restored.

5.3 Signals / data lines

Do not exceed the maximum power allowed, which varies, according to the type of signal.

Lay the cables far from power cables or cables having a different tension and that are able to emit electromagnetic disturbances.

Do not lay the cable near devices which can generate electromagnetic interferences.

Do not lay the cables parallel to other cables, cable crossings are possible, only if laid at 90°.

Connect the screen to the ground, only if there aren't disturbances.

Guarantee the continuity of the screen during the entire extension of the cable.

Respect impendancy, capacity and attenuation indications.

5.4 Power input



Fix the cables: if vacated may be subject to tearing.




The cable must not touch the compressor and the refrigerant piping (they reach high temperatures).


5.5 Connections performer by customer

	English	Deutsch	Español	Italiano	Français
	demand limit	demand limit	demand limit	demand limit	demand limit
DEMAND LIMIT	water reset	water reset	water reset	water reset	water reset
WATER RESET	outside air temperature probe	Außenlufttemperaturfühler	sonda de temperatura aire externo	sonda di temperatura aria esterna	sonde de température air extérieur
BTairExt	natural-cooling 3-way valve	3-Wegeventil Natural-Cooling	válvula de 3 vías natural-cooling	válvula 3 vie natural-cooling	soupape 3-voies natural-cooling
YVNC	natural-cooling 3-way valve	3-Wegeventil Natural-Cooling	válvula de 3 vías natural-cooling	válvula 3 vie natural-cooling	soupape 3-voies natural-cooling
YVNCM	remote winter/summer selector	Fernwätschalter Winter/Summer	selector remoto "verano/invierno"	selettore remoto estate/inverno	sélecteur déporté "été/hiver"
SA5	remote on/off selector	Fernwätschalter Ein/Aus	selector on/off remoto	selettore on/off remoto	sélecteur ON/OFF déporté
SQ1	Source side exchanger flow switch	Stromungswächler Ein/Aus	Flujosistato cambiador lado fuente	flussosistato scambiatore lato sorgente	Contrôleur de débit de l'échangeur côté source
SQS	utility side exchanger flow switch	Stromungswächler Nützlichkeit auf Verbrauchseite	Flujosistato intercambiador lado equipo	flussosistato scambiatore lato utilizzo	Contrôleur de débit d'échangeur côté utilisateur
SQU	Flow switch for heat recovery exchanger	Stromungswächler Rückgewinnung	Flujosistato por intercambiador a recuperación de calor	flussosistato per scambiatore recupero di calore	Contrôleur de débit pour échangeur récupération de chaleur
CU	use call	Verbrauchruf	llamada en utilización	Chiamata utilizzo	appel utilisation
CR	remote heat recovery enabling selector	Fernwätschalter Rückgewinnung	selector remoto de habilitación para la recuperación	selettore remoto di abilitazione al recupero	sélecteur déporté de validation récupération
SA-AACS	sanitary water cycle selector	Wätschalter der Brauchwasser	selector solicitud agua sanitaria	selettore richiesta acqua sanitaria	sélecteur demande eau sanitaire
SA1.1	second set-point enabling switch	Wätschalter 2.Sollwert	selector habilitación segundo set-point	selettore abilitazione secondo set-point	sélecteur validation deuxième consigne
ACS	valve ACS	Hahn ACS	Válvula de ACS	válvula ACS	Valve ACS

collegamenti a cura del cliente
connections performed by customer
raccordements à la charge du client
Kundenseitige Anschlüsse
conexiones a cargo del cliente

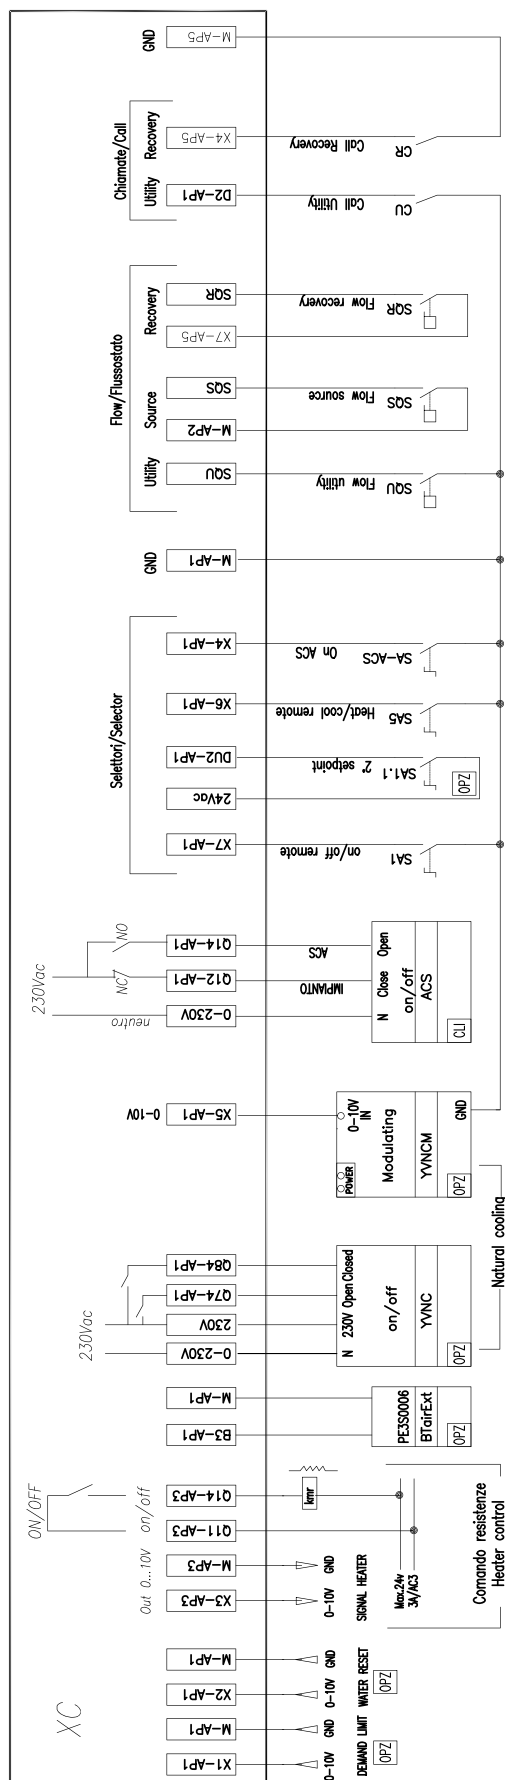

5.6 Computer connection

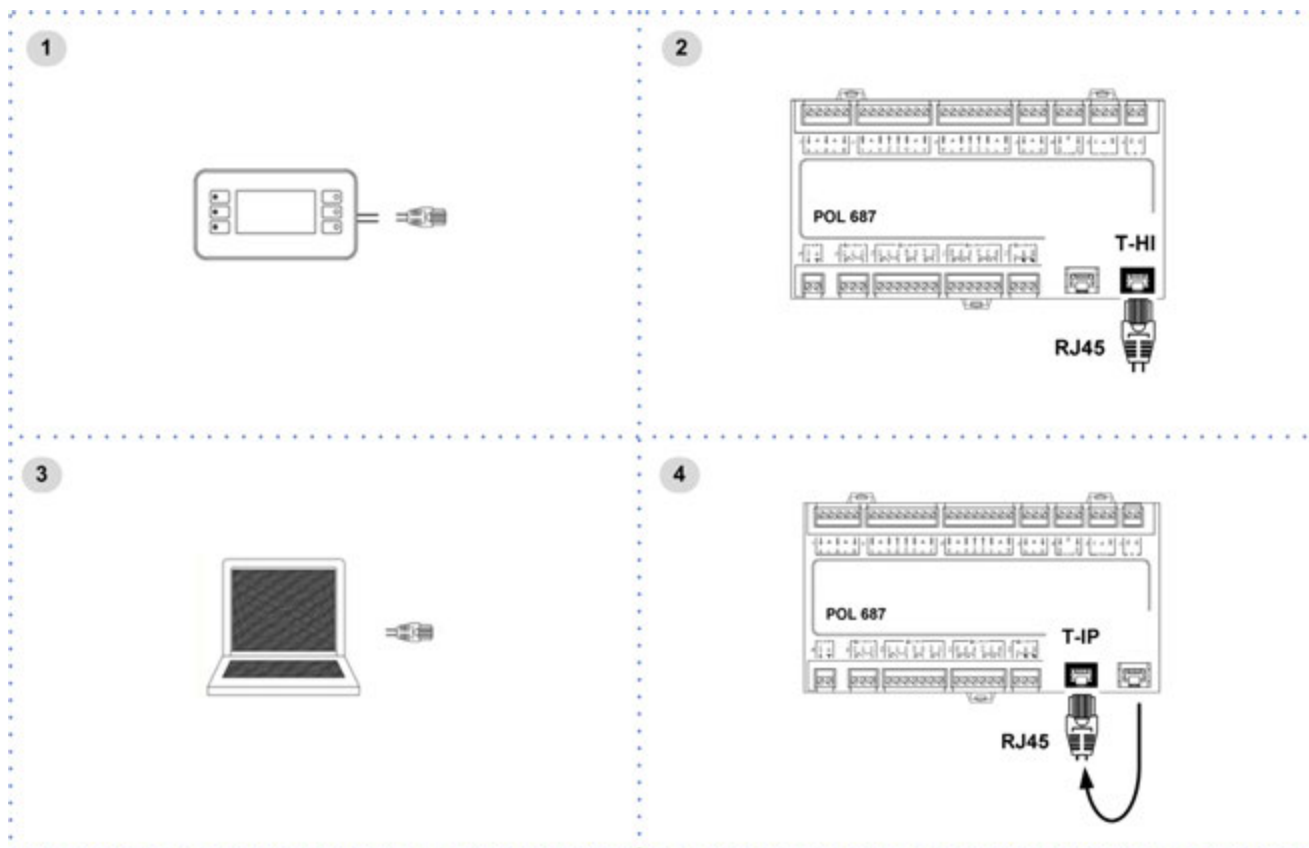


1. Service keypad
2. RJ45: standard connection
3. P.C.-not supplied
4. P.C. connection, shift RJ45 from T-HI to T-IP

Configure P.C.

1. connect P.C. and main module with LAN cable
2. check in the taskbar that the connection is active
3. open Control Panel and select Network and sharing center
4. select Modify board setting
5. select Local area connection (LAN)
6. select Internet protocol version 4 (TCP) IPV4 and enter Property
7. set the IP address 192.168.1.100
8. set Subnet mask as 255.255.255.0
9. confirm (OK)
10. enter Start (Windows button)
11. write the command cmd and enter/do it
12. write and run the command Ping 192.168.1.42
13. the message, connection is OK, will appear when successful
14. enter the browser (Chrome, Firefox ecc)
15. write and run the command `http://192.168.1.42`
16. Userid = WEB
17. Password = SBTAdmin!

5.7 Remote control

Option

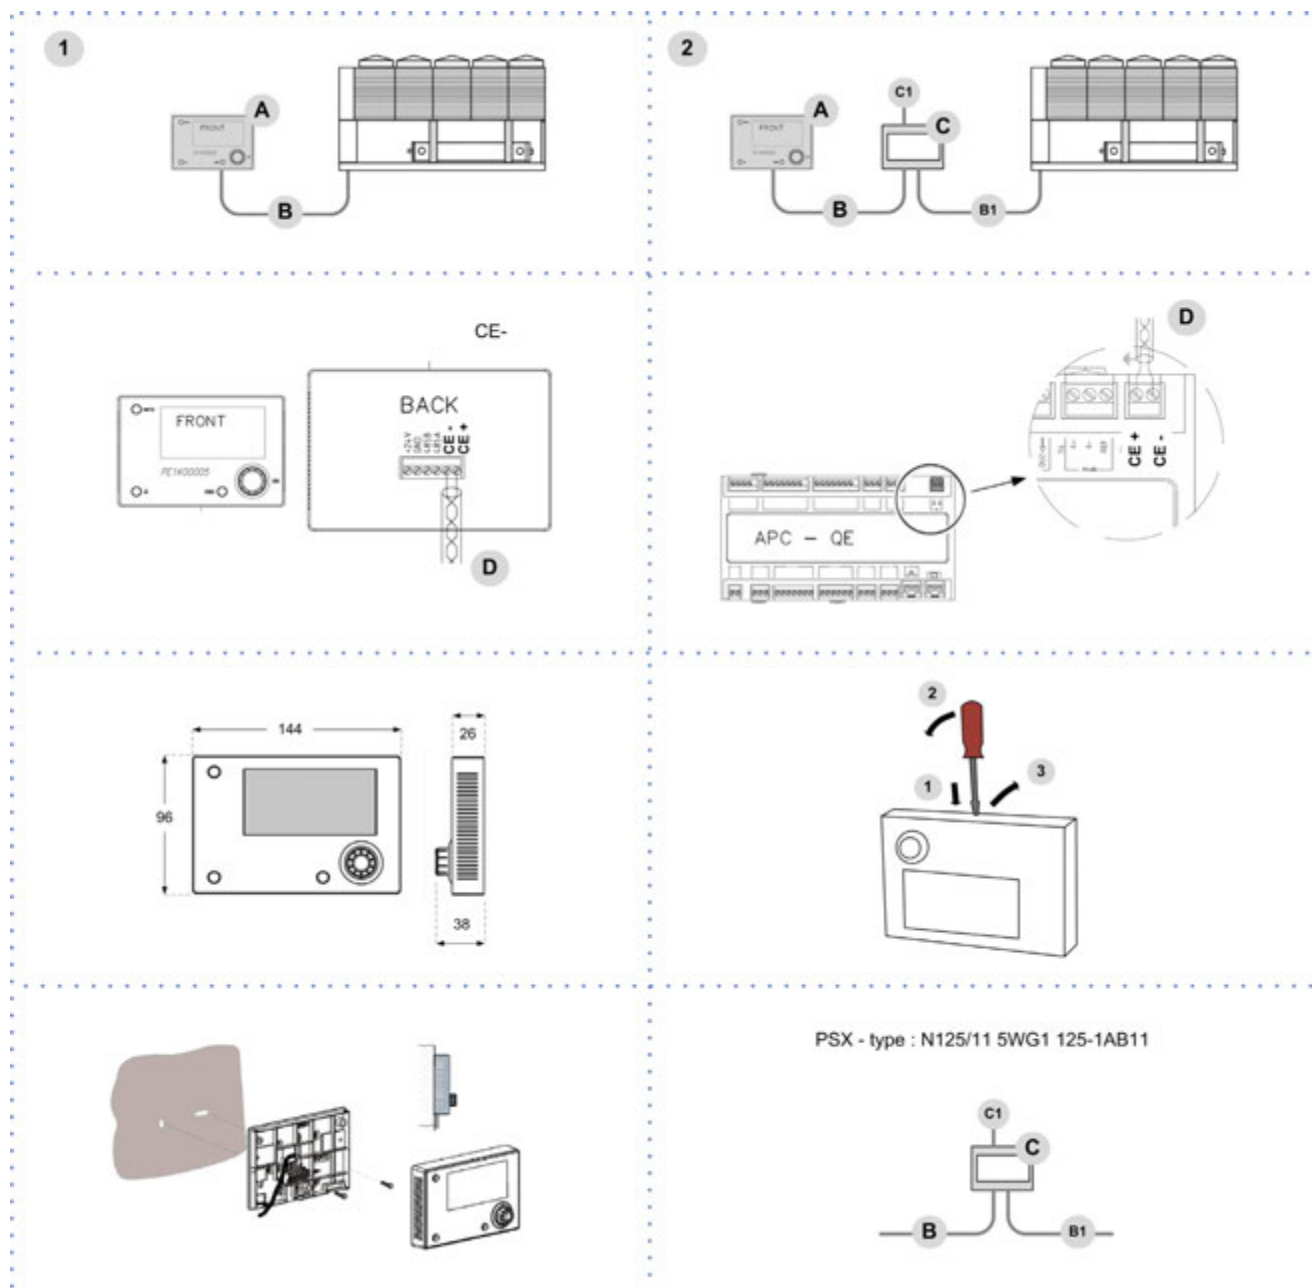


- 1 Distance up to 350 mt
2 Distance up to 700 mt

- A** User interface
B = B1 KNX bus, max 350 mt
twisted pair with shield, \varnothing 0,8 mm
EIB/KNX cable marking recommende
C PSX - Mains power supply unit
pwer supply unit N125/11 5WG1 125-1AB11
C1 AC 120...230V, 50...60Hz
D KNX bus, max 350 mt

5.8 Modbus - RS485

Option

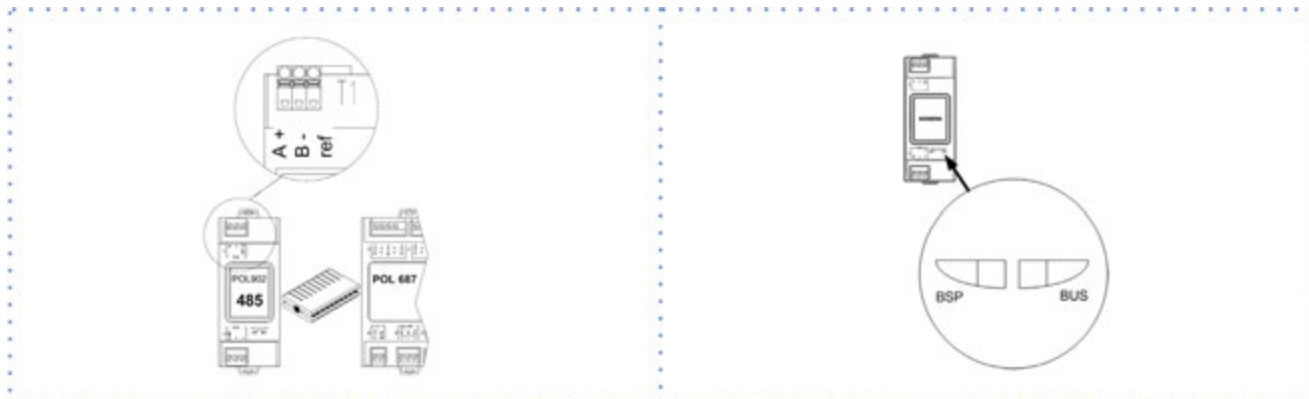

LED BSP
green communication with AP1 module
yellow communication ok
red software ok but communication with AP1 down
flashing: software error
fixed: hardware error

LED BUS
green communication with Modbus
yellow communication ok
red startup / channel not communicating
communication down



- A. Unit
- B. Metal conduit
- C. Metal septums
- D. Metal-lined sheath (sleeve)

Modbus / LonWorks / BACnet Cable requirements

Couple of conductors twisted and shielded

Section of conductor 0,22mm²...0,35mm²

Rated power between conductors < 50 pF/m


Nominal impedance 120 Ω

Recommended cable BELDEN 3106A

- Every RS485 serial line must be set up using the 'In/Out' bus system.
- Other types of networks are not allowed, such as Star or Ring networks.
- The difference in potential between the earth of the two RS485 devices that the cable shielding needs to be connected to must be lower than 7 V
- There must be suitable arresters to protect the serial lines from the effects of atmospheric discharges
- A 120 ohm resistance must be located on the end of the serial line. Alternatively, when the last serial board is equipped with an internal terminator, it must be enabled using the specific jumper, dip switch or link.
- The cable must have insulation features and non-flame propagation in accordance with applicable regulations.
- The RS485 serial line must be kept as far away as possible from sources of electromagnetic interference.

5.9 LonWorks

Option

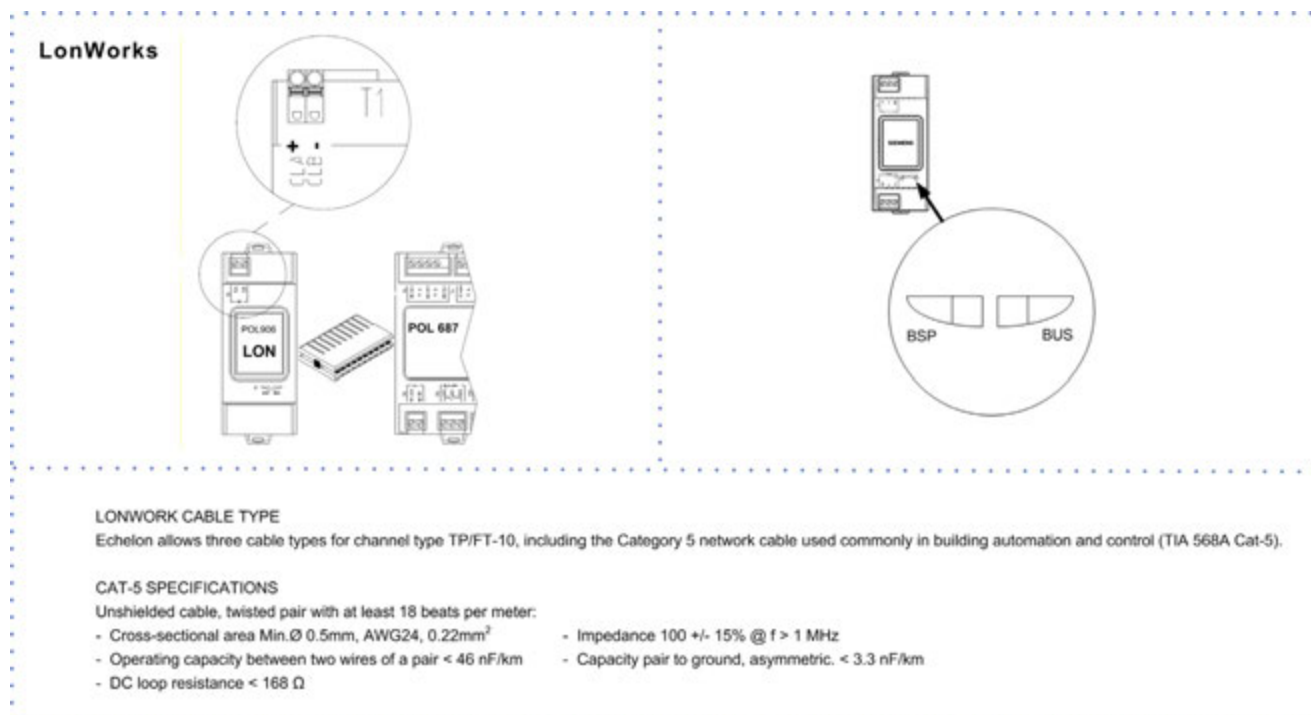


LED BSP communication with AP1 module
green communication ok
yellow software ok but communication with AP1
 down
red flashing: software error
 fixed: hardware error

LED BUS communication with LonWorks
green ready for communication
yellow startup
red flashing: communicating not possible
 communication down

5.10 BACnet IP

Option

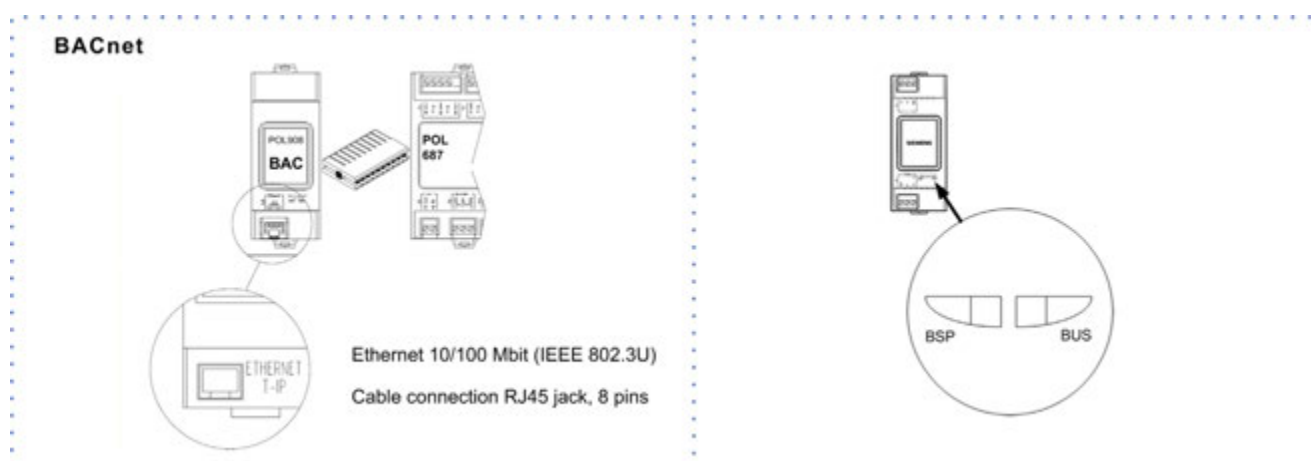

LED BSP communication with AP1 module
green communication ok
yellow software ok but communication with AP1
 down
red flashing: software error
 fixed: hardware error

LED BUS communication with BACnet
green ready for communication
yellow startup
red BACnet server down
 restart after 3 sec

6 Start-up

6.1 General description

The indicated operations should be done by qualified technician with specific training on the product.

The electrical, water connections and the other system works are by the installer.

Upon request, the service centres performing the start-up.

Agree upon in advance the start-up data with the service centre.

For details refer to the different manual sections.

Before checking, please verify the following:

- the unit should be installed properly and in conformity with this manual
- the electrical power supply line should be isolated at the beginning
- the unit isolator is open, locked and equipped with the suitable warning
- make sure no tension is present



After turning off the power, wait at least 5 minutes before accessing to the electrical panel or any other electrical component.



Before accessing check with a multimeter that there are no residual stresses.

6.2 Preliminary checks

Unit OFF power supply

1. safety access
2. functional spaces
3. structure integrity
4. unit on vibration isolators
5. unit input water filter + shut-off valves for cleaning
6. vibration isolators on water connections
7. expansion tank (indicative volume = 5% system content)
8. minimum system water content
9. cleaned system
10. loaded system + possible glycol solution + corrosion inhibitor
11. system under pressure
12. vented system
13. refrigerant circuit visual check
14. earthing connection
15. power supply features
16. electrical connections provided by the customer

6.3 Start-up sequence

Unit ON power supply

1. compressor crankcase heaters operating at least since 8 hours
2. off-load voltage measure
3. phase sequence check
4. pump manual start-up and flow check
5. shut-off valve refrigerant circuit open
6. unit ON
7. load voltage measure and absorptions
8. liquid sight glass check (no bubbles)
9. measure return and supply water temperature
10. measure super-heating and sub-cooling
11. check no anomalous vibrations are present
12. climatic curve personalization
13. climatic curve personalization
14. scheduling personalization
15. complete and available unit documentation

6.4 Configuration for 2-pipe system

To ensure correct operation of the unit, the latter must be equipped with a flow-rate control device on the source side.

System cooling only (1)

In this condition, all the cooling capacity is released to the user side of the heat exchanger

The maintenance of the user side set point is ensured through the modulation of the capacity steps.

All the heating capacity is dispersed on the source exchanger

System cooling requirements and free production of domestic hot water (2)

In this condition, all the cooling capacity is released to the user side of the heat exchanger

All the heating capacity is released to the recovery side of the heat exchanger.

The capacity steps are modulated so as to guarantee a constant set point on the priority side chosen by the user.

System heating only (3)

In this condition all the heating capacity is released to the user side of the heat exchanger.

The maintenance of the user side set point is ensured through the modulation of the capacity steps.

All the cooling capacity is dispersed on the source exchanger.

System heating requirements and production of domestic hot water (4)

In this condition, the heat is released at the same time to the user side and the recovery side of the heat exchanger.

The total heating capacity that can be provided to the two points of use cannot exceed 100% of the unit's nominal heating capacity.

The unit will manage the capacity steps considering both loads and through modulation of the flow-rate it will initially satisfy the primary point of use, reserving the residual capacity for the secondary point of use.


All the cooling capacity is dispersed on the source exchanger.

Requirement for the production of domestic hot water only (5)

In this condition all the heating capacity is released to the recovery side of the heat exchanger.

The load requirements are met through the modulation of the capacity steps.

All the cooling capacity is dispersed on the source exchanger.

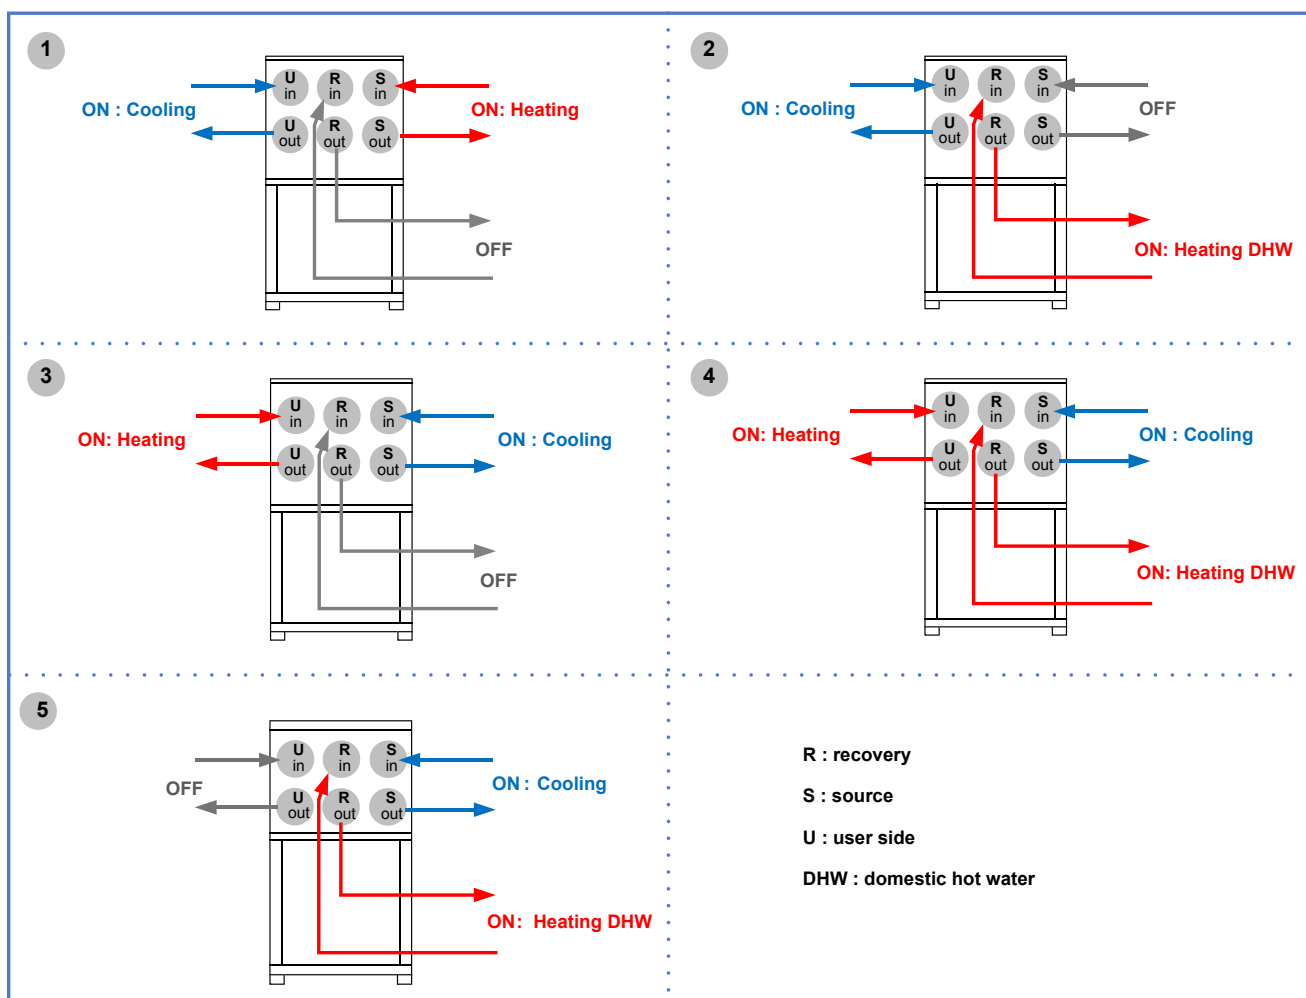

6.5 Configuration for 4-pipe system

Cooling requirement 100%, Heating requirement 0% (1)

In this condition, all the cooling capacity is released to the cooling side of the heat exchanger.

The maintenance of the cooling side set point is ensured through the modulation of the capacity steps.

All the heating capacity is dispersed on the source exchanger.

The pump control on the heating side may be activated or deactivated based on a schedule to keep water temperature under control.

Cooling requirement 0%, Heating requirement 100% (2)

In this condition all the heating capacity is released to the heating side of the heat exchanger.

The maintenance of the heating side set point is ensured through the modulation of the capacity steps.


All the cooling capacity is dispersed on the source exchanger.

Cooling capacity is not released on the cooling side: the cooling side pump control may be kept activated at a minimum or it may be activated and deactivated based on a regular schedule to keep water temperature under control.

Cooling requirement 100%, Heating requirement 100% (3)

In this condition all the cooling capacity is released to the user side of the heat exchanger and all the heating capacity is released to the heating side of the heat exchanger.

Maintenance of the heating side/cooling side set point is ensured through the modulation of the capacity steps, according to the operation mode used (heating side in winter operation, cooling side in summer operation).

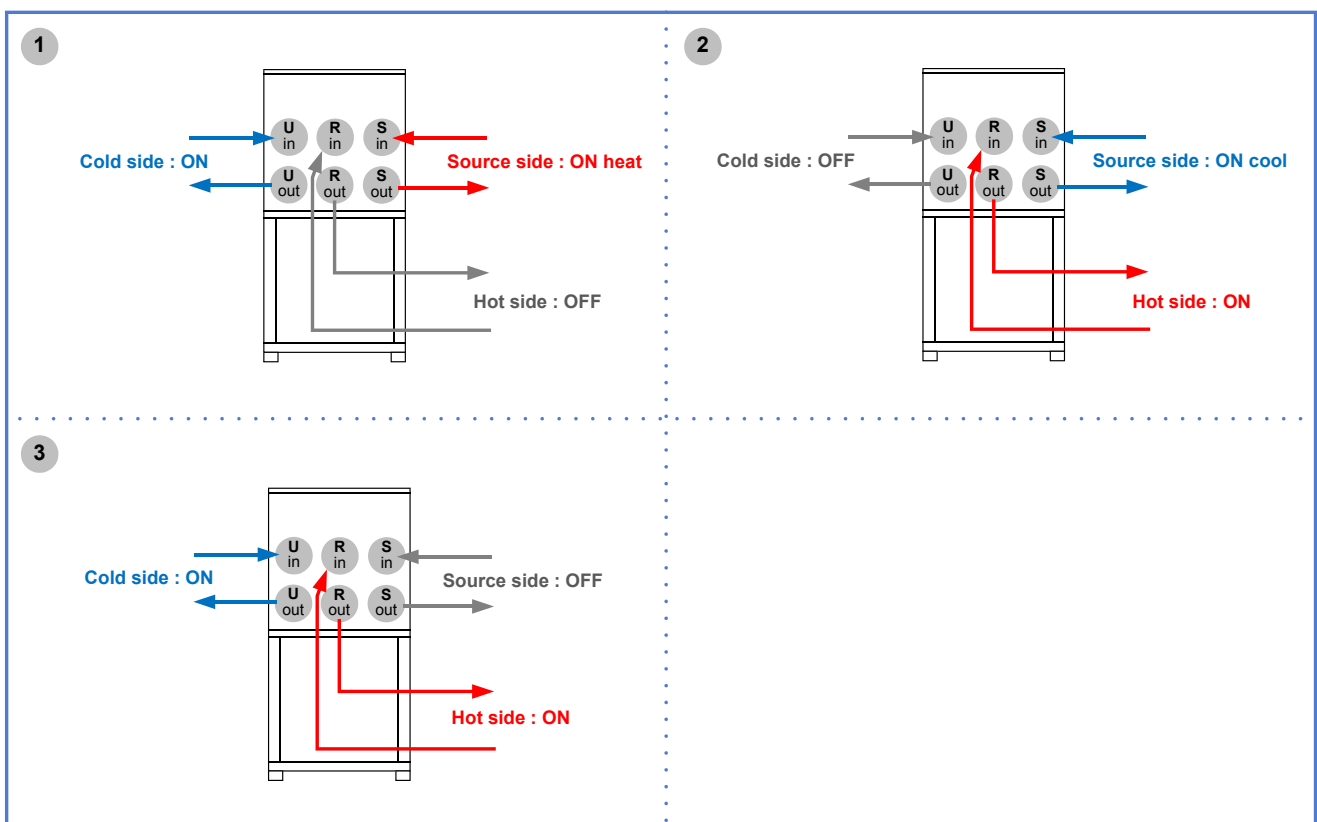

6.6 Refrigeration circuit

1. Check carefully the refrigerating circuit: the presence of oil stains can mean leakage caused by transportation, movements or other).
2. Verify that the refrigerating circuit is in pressure: Using the unit manometers, if present, or service manometers.
3. Make sure that all the service outlets are closed with proper caps; if caps are not present a leak of refrigerant can be possible.
4. Open the valves of the refrigerant circuit, if there are any.

6.7 Water circuit

1. Before realizing the unit connection make sure that the hydraulic system has been cleaned up and the cleaning water has been drained.
2. Check that the water circuit has been filled and pressurized.
3. Check that the shut-off valves in the circuit are in the "OPEN" position.
4. Check that there isn't air in the circuit, if required, evacuate it using the air bleed valve placed in the system high points.
5. When using antifreeze solutions, make sure the glycol percentage is suitable for the type of use envisaged.



Neglecting the washing will lead to several filter cleaning interventions and at worst cases can cause damages to the exchangers and the other parts.

Weight of glycol (%)	10	20	30	40
Freezing temperature (°C)	-3.9	-8.9	-15.6	-23.4
Safety temperature (°C)	+1	-4	-10	-19

6.8 Electric Circuit



Verify that the unit is connected to the ground plant.


Check the conductors are tightened as: the vibrations caused by handling and transport might cause these to come loose.

Connect the unit by closing the sectioning device, but leave it on OFF.

Check the voltage and line frequency values which must be within the limits: 400/3/50 +/- 10%

Check and adjust the phase balance as necessary: it must be lower than 2%

Example

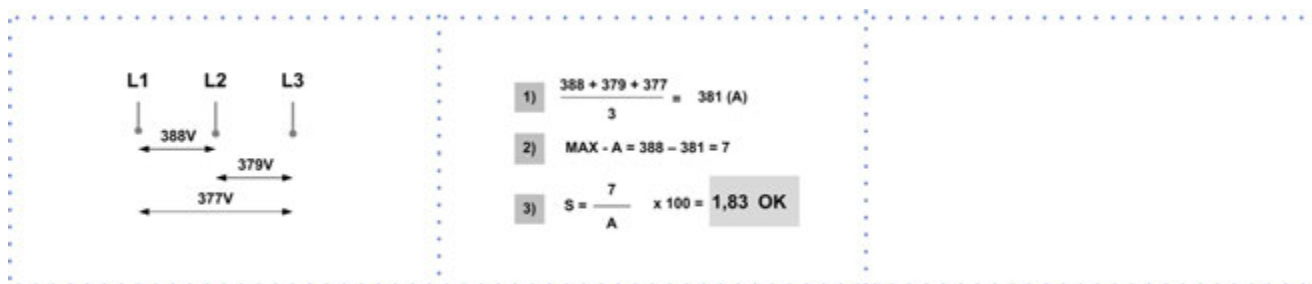

Working outside of these limits can cause irreversible damages and voids the warranty.

6.9 Compressor crankcase heaters

Connect the oil resistances on the compressor crankcase at least 8 hours before the compressor is to be started:

- at the first unit start-up
 - after each prolonged period of inactivity
1. Supply the resistances switching off the unit isolator switch.
 2. To make sure that heaters are working, check the power input.
 3. At start-up the compressor crank-case temperature on the lower side must be higher at least of 10°C than the outside temperature.



Do not start the compressor with the crankcase oil below operating temperature.

6.10 Remote controls

Check that the remote controls (ON-OFF etc) are connected and, if necessary, enabled with the respective parameters as indicated in the "electrical connections" section.

Check that probes and optional components are connected and enabled with the respective parameters ("electrical connections" section and following pages).

6.11 Voltages

Check that the air and water temperatures are within in the operating limits.

Start-up the unit.

With unit operating in stable conditions, check:

- Voltage
- Total absorption of the unit
- Absorption of the single electric loads

6.12 Demand limit



Menu accessible only after having entered the password.



Access reserved only to specifically trained personnel.




The parameter modification can cause irreversible damages.

It is possible to limit the absorbed electric power with an external signal 0-10 Vcc.

The higher the signal is, the lower the number of compressors available to meet the thermal need.

If only P0002: EnDemandLimit \neq 0

Path: Main Menu / Unit parameters / Demand limit

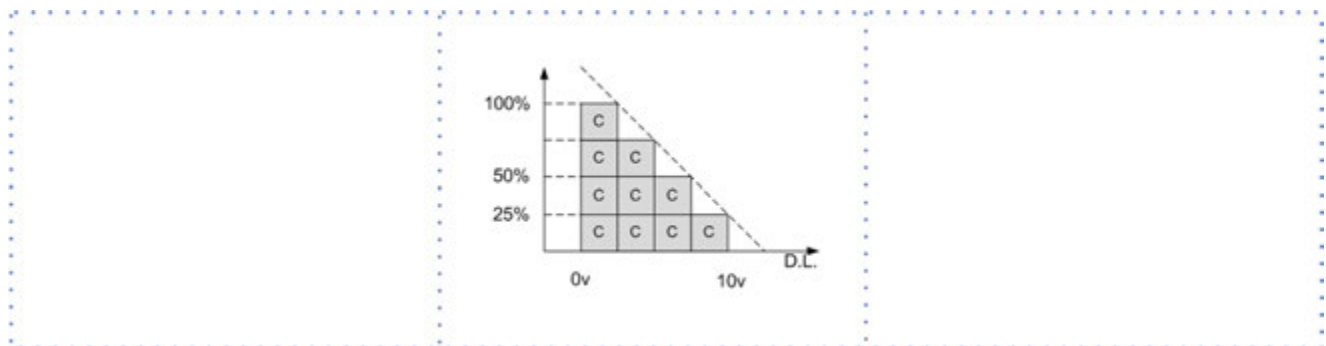

Step	Display	Action	Menu/Variable	Keys		Notes
1		Press 3 sec.		✓		
2	Password	Set	Password	▲	✓	
3		Press		i		
4	Main menu	Select	Unit parameters	▼	✓	
5	Unit parameters	Select	Set Point	▼	✓	
6	Set Point	Select	Demand limit	▼	✓	
7		Set	Demand limit	▲	▼	
8		Confirm		✓		
9		Press 3 sec.		⏏		
10		Select	Local connections	✓		

Path: Main Menu / Unit parameters / Demand limit

Parameters	Short description	Description
P0200	setpointdemandlimit	Parameter setting of the value % of demand limit

6.13 Climatic Text


Function allows the automatic regulation of the preset set-point depending of the outside temperature air measured by the unit probe.

The setpoint defined by the temperature curve is shown at status S0052: ActualUtSetp

Only if P0036: EnCompExt \neq 0

Path: Main Menu / Unit parameters / TExt Correction config

- ⚠ Menu accessible only after having entered the password.
 - ⚠ Access reserved only to specifically trained personnel.
 - ⚠ The parameter modification can cause irreversible damages.
- Example

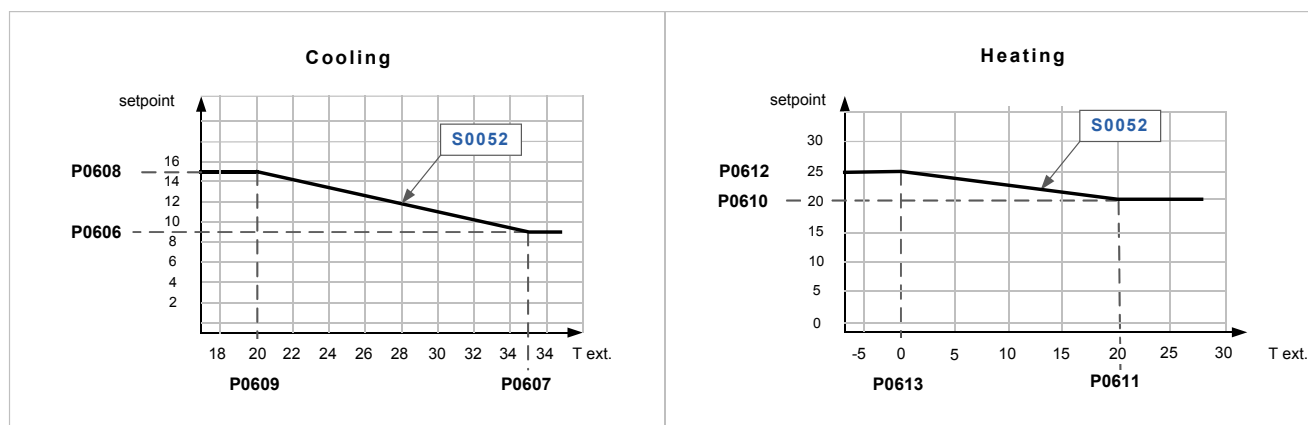


Step	Display	Action	Menu/Variable	Keys		Notes
1		Press 3 sec.		✓		
2	Password	Set	Password	▲	✓	
3		Press		i		
4	Main menu	Select	Unit parameters	▼	✓	
5	Unit parameters	Select	Climatic TExt	▼	✓	
6	Climatic TExt (pwd)	Select	Parameter	▼	✓	
7		Set		▼	▲	
8		Confirm		✓		
9		Press 3 sec.		⏏		
10		Select	Local connections	▼	✓	

Path: Main Menu / Unit parameters / TExt Correction config

Parameters	Short description	Description
P0606	CSptLow	setpoint temperature value when the air temperature value is AirAtSptLowC
P0607	AirAtSetPointLowC	external air temperature value where the calculated setpoint takes on the value given by CSptLow
P0608	CSptHigh	setpoint temperature value when the air temperature value is AirAtSptHigC
P0609	AirAtSetPointHighC	external air temperature value where the calculated setpoint takes on the value given by CSptHigh
P0610	HSptLow	setpoint temperature value when the air temperature value is AirAtSptLowH
P0611	AirAtSptLowH	external air temperature value where the calculated setpoint takes on the value given by HSptLow
P0612	HSptHigh	setpoint temperature value when the air temperature value is AirAtSptHigH
P0613	AirAtSptHighH	external air temperature value where the calculated setpoint takes on the value given by HSptHigh

6.14 Water reset

- ⚠ Menu accessible only after having entered the password.
- ⚠ Access reserved only to specifically trained personnel.
- ⚠ The parameter modification can cause irreversible damages.
The water reset correction affects the setpoint defined by the Climate curve TExt (actual setpoint).
The setpoint is shown at status S0052: ActualUtSetp
Only if P0003: En WaterReset ≠ 0
Path: Main menu / Unit parameters / Water reset config

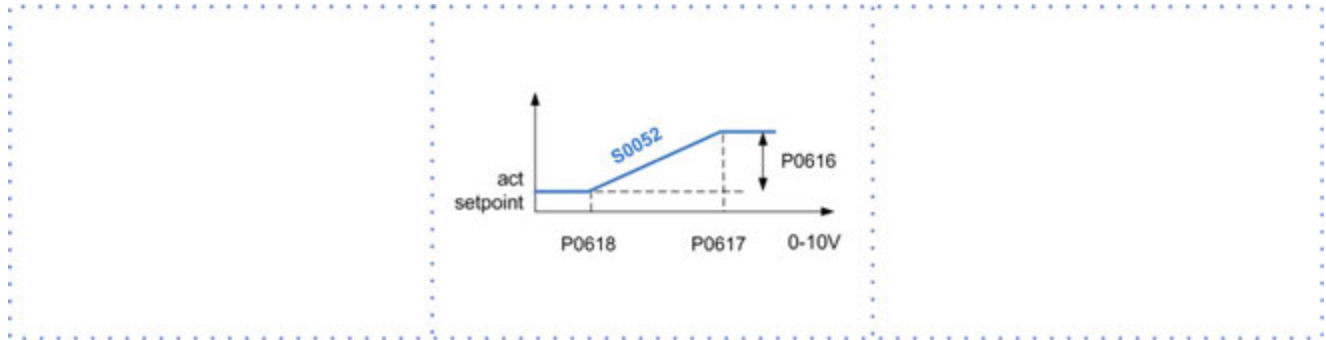

Step	Display	Action	Menu/Variable	Keys		Notes
1		Press 3 sec.		✓		
2	Password	Set	Password	▼	✓	
3		Press		i		
4	Main menu	Select	Unit parameters	▼	✓	
5	Unit parameters	Select	Water reset	▼	✓	
6	Water reset	Select	Parameter	▼	✓	
7		Set		▼	▲	
8		Confirm		✓		
9		Press 3 sec.		⏏		
10		Select	Local connections	✓		



Path: Main Menu / Unit parameters / Water reset

Parameters	Short description	Description
P0616	MaxCWRC	Maximum correction to be applied to the setpoint Cooling
P0617	SWRMaxC	Value of the WR control signal corresponding to the correction of the set Cool equal to P0616
P0618	SWRMinC	Value of the WR control signal corresponding to the correction of the set COOL equal to 0
P0615	MaxCWRH	Maximum correction to be applied to the setpoint Heating
P0619	SWRMaxH	Value of the WR control signal corresponding to the correction of the set Heating equal to P0615
P0620	SWRMinH	Value of the WR control signal corresponding to the correction of the set Heating equal to 0


P0616 / P0618: Cooling
P0615, P0619, P0620: Heating

6.15 ECOSHARE function for the automatic management of a group of units



- Max 7 units
- Maximum length of the bus line: 700 m.
- Maximum distance between 2 units: 300 m
- Type of cable: shielded twisted pair cable Ø 0,8 mm. use an EIB/KNX cable
- Possible connections: Tree, star, in/out bus, mixed
- It is not possible to use a ring connection
- No end-of-line resistor or terminator required
- There must be suitable arresters to protect the serial lines from the effects of atmospheric discharges
- The data line must be kept separate from the power conductors or powered at different voltage values and away from possible sources of electrical interference

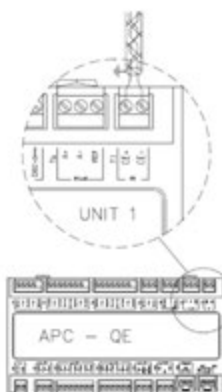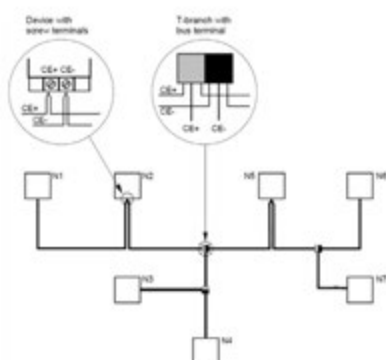

Tree topology (with stub lines)

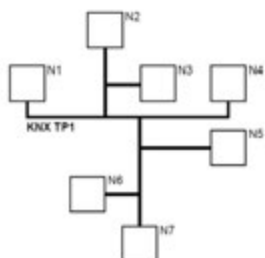

Line topology (with loops)

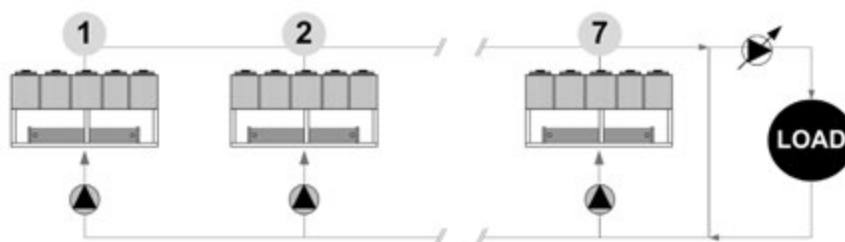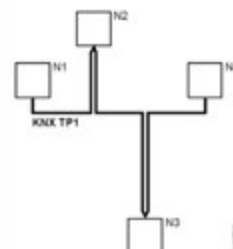

If there are more units connected in a local network set the mode of operation.

MODE A

Every unit manages its own compressors according to the setpoint.

Every unit optimizes its refrigeration circuits.

Pumps always active, even with compressor stopped.


P0658 = 0

P0657 > 0 °C

setpoint1 > setpoint2 > setpoint3

or

setpoint1 < setpoint2 < setpoint3

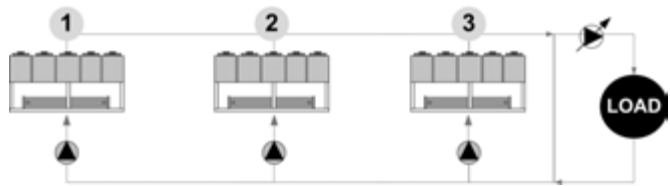

MODE B

The master manages the single cooling.

The master optimizes individual refrigerant circuits.


Pumps always active, even with compressor stopped.

P0658 = 1

P0657 = 0 °C

setpoint1 = setpoint2 = setpoint3

plus: optimal H2O temperature control

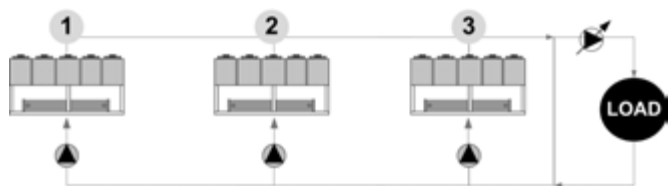

MODE C

The master manages the single cooling.

The master optimizes individual refrigerant circuits.


Active pumps only with active compressors.

P0658 = 2

P0657 = 0 °C

setpoint1 = setpoint2 = setpoint3

plus: minimum pumps consumption need balanced system (t1 = t2 = t3)

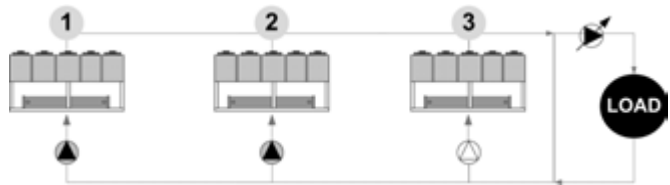

Path: Main Menu / Unit parameters / Master Slave

Parameters	Short description	Description
P0655	LNInstalledUnits	Number of network-connected units including the master
P0656	LNStandByUnits	Number of units kept in standby
P0657	LNOffset	Temperature Offset the master sum or subtract, depending on the way you set, in order of priority, to the set point of the slave
P0658	TypeRegMS	Operation mode: 0=mode A; 1=mode B; 2=mode C
P0659	LNAddress	ProcessBus address unit

6.16 Evaporator water flow-rate

Check that the difference between the temperature of exchanger return and supply water corresponds to power according to this formula:

$$\text{unit cooling power (kW)} \times 860 = \Delta t (^{\circ}\text{C}) \times \text{flow rate (L/h)}$$

The cooling power is shown in the table of the GENERAL TECHNICAL DATA included in this manual, referred to specific conditions, or in the tables on COOLING PERFORMANCE in the TECHNICAL BULLETIN referred to various conditions of use.

Check for water side exchanger pressure drops:

determine the water flow rate

measure the difference in pressure between exchanger input and output and compare it with the graph on WATER SIDE EXCHANGER PRESSURE DROPS

The measurement of pressure will be easier if pressure gauges are installed as indicated in the DIAGRAM OF SUGGESTED WATER CONNECTIONS.

6.17 Scroll compressor

The Scroll compressors have only one rotation direction.

In the event it is reversed, the compressor is not immediately damaged, but increases its noise and jeopardises pumping.

After a few minutes, the compressor blocks due to intervention of the thermal protection.

In this case, disconnect power supply and invert 2 phases on the machine power supply.

Avoid the compressor working for a long time with contrary rotation: more than 2-3 of these anomalous start-ups can damage it.

To ensure the rotation direction is correct, measure the condensation and suction pressure.

The pressures must significantly differ: upon start-up, the suction pressure decreases whereas the condensation one, increases.

6.18 Operating at reduced load

The units are equipped with partialization steps and they can, therefore, operate with reduced loads.

However a constant and long operation with reduced load with frequent stop and start-up of the compressor/s can cause serious damages for the lack of oil return.

The above-described operating conditions must be considered outside the operating limits.

In the event of compressor breakdown, due to operating in the above-mentioned conditions, the guarantee will not be valid and Clivet spa declines any responsibility.

Check periodically the average operating times and the frequency of the compressors starts: approximately the minimum thermal load should be such as to need the operating of a compressor for at least ten minutes.

If the average times are close to this limit, take the proper corrective actions.

6.19 Start-up report

Identifying the operating objective conditions is useful to control the unit over time.

With unit at steady state, i.e. in stable and close-to-work conditions, identify the following data:

- total voltages and absorptions with unit at full load
- absorptions of the different electric loads (compressors, fans, pumps etc)
- temperatures and flows of the different fluids (water, air) both in input and in output from the unit
- temperature and pressures on the characteristic points of the refrigerating circuit (compressor discharge, liquid, intake)

The measurements must be kept and made available during maintenance interventions.

6.20 2014/68/UE PED directive

DIRECTIVE 2014/68/UE PED gives instructions for installers, users and maintenance technicians as well.

Refer to local regulations; briefly and as an example, see the following:

Compulsory verification of the first installation:

- only for units assembled on the installer's building site (for ex. Condensing circuit + direct expansion unit)

Certification of setting in service:

- for all the units

Periodical verifications:

- to be executed with the frequency indicated by the Manufacturer (see the "maintenance inspections" paragraph)

7 Control



7.1 Led

INFO	Not used
ALARM	Blink / fixed = alarm present
CANCEL	not used currently








7.2 Display

Ref.	Variable	Description
A		Date - Time
B	ActualSetPoint	Temperature setting
C	T.InH2OUtilitySide	Water inlet temperature utility side
D	T.OutH2OUtilitySide	Water outlet temperature utility side
E	ActualState	On / off / eco / pmp On
F	ActualMode	Cooling - Cooling+PartRecover - Cooling+FullRecover - Recover - Heating - Heating+Recover
	2	Installed compressors
	1 - 0	Compressors ON example: circuit 1 = 1 compr. On circuit 2 = 0 compr. On
	50%	Heating capacity

7.3 Keys

Symbol	Name	Description
	Info	Main menu
	Alarm	Alarm display
	Cancel	Exit Previous level Keyboard settings
	Up	Increases value
	Down	Decreases value
	Enter	Confirm Password

7.4 Change unit state








Step	Display	Action	Menu/Variable	Keys		Notes
1		Press				
2	Main menu	Select	Cmd Local state			
3		Set	OFF - ECO - ON - Pump On			*
4		Confirm				
6		Exit				

* Local state











ECO: recurrent pump ON-OFF; compressors keep water system at setpoint ECO

Pmp ON: pump ON, compressor OFF

7.5 Change the mode

Step	Display	Action	Menu/Variable	Keys		Notes
1		Press				
2	Main menu	Select	Cmd Local mode			
3		Set	Cooling Cooling+PartRecover Cooling+FullRecover Recover Heating Heating+Recover			
4		Confirm				
5		Exit				

















7.6 Modify setpoint

Step	Display	Action	Menu/Variable	Keys		Notes
1		Press				
2	Main menu	Select	Unit parameters			
3	Unit parameters	Confirm	Set Point			
4		Select	Set Point			
5		Set	Set Point			
6		Confirm				
7		Exit				














Parameters	Short description	Description	
P0583	SetPointCooling	Setpoint Cool	
P0584	2SetPointCooling	2° Setpoint Cool	Enable by remote switch
P0855	SetPointECOCooling	Economic summer SetPoint	
P0577	SetPointHeating	Setpoint Heat	
P0578	2SetPointHeating	2° Setpoint Heat	
P0579	SetPointECOHeating	Economic winter SetPoint	
P0640	SetPointRecover	Recovery Set Point	
P0580	ACSSetPoint	domestic hot water set point	

7.7 Scheduler

It is possible to set 6 events (Off, Eco, On, Recirculating) for each week day.







Step	Display	Action	Menu/Variable	Keys		Notes
1		Press				
2	Main menu	Select	Scheduler			
3	Scheduler	Select	Day			
4		Select	Time			
5		Set	Event time			
6		Confirm				
7		Select	Value			
8		Set	On/Eco..			
9		Confirm				
10		Exit				

Enable Scheduler

Step	Display	Action	Menu/Variable	Keys		Notes
1		Press 3 sec.				
2	Password	Set	Password			
3		Press				*
4	Main menu	Select	Unit Parameters			
5		Select	Option config			
6		Set	P0052=1			
7		Press 3 sec.				
		Select	Local connections			

* Unit Parameters menu is displayed

7.8 Display the status

Step	Display	Action	Menu/Variable	Keys		Notes
1		Press				
2	Main menu	Select	Machine State			
3		Select	General, circuit, ecc..			
4		Exit				

Nr.	GENERAL STATA
50	Current Mode
51	Current Status
52	Current Setpoint User-side
53	Steps Qty
54	Steps On
55	Current Setpoint Recovery
56	Alarms
57	Warning
58	Recovery Request
59	User-side Request
60	Domestic Hot Water Status
801	Recovery Pump 1 Hours
802	Recovery Pump 2 Hours
803	Recovery Pump 3 Hours
-	Bitmap Alarms 1
-	Bitmap Alarms 2
-	Bitmap Alarms 3
-	Bitmap Alarms 4

Nr.	USER-SIDE STATA
80	User-side Pump 1 Command
81	User-side Pump 2 Command
82	User-side Pump 3 Command
83	User-side Inverter Command
84	User-side Inverter Signal
85	User-side Inverter Reset
86	Pump On for Anti-freeze
87	Anti-freeze Heaters User side
88	User-side Flow Request
89	LimitFlow Heating
90	LimitFlow Recovery
91	LimitFlow Cooling
92	User-side Pump 1 Hours
93	User-side Pump 2 Hours
94	User-side Pump 3 Hours

Nr.	SOURCE STATA
70	Source Pump 1 Command
71	Source Pump 2 Command
72	Source Pump 2 Command
73	Source Inverter Command
74	Source Inverter Signal
75	Source Inverter Reset
1601	Source Pump 1.1 Hours
1602	Source Pump 2.1 Hours
1603	Source Pump 3.1 Hours
2601	Source Pump 1.2 Hours
2602	Source Pump 2.2 Hours
2603	Source Pump 3.2 Hours

Nr	CIRCUIT 1 STATA
1001	Current Schema 1.1
1002	SubCooling
1003	Current capacity %
1004	Pressure ratio
1005	Envelope Zone 1.1
1006	Envelope Zone 2.1
1007	Envelope Zone 3.1
1008	Offset Envelope 1.1
1009	Superheat Set PID 3.1
1100	Defrost Command 1.1
1101	Superheat Set PID 1.1
1102	Superheat Set PID 2.1
1103	Number Compressors On
1104	Compressor 1.1 Starts
1105	Compressor 2.1 Starts
1106	Compressor 3.1 Starts
1107	Compressor 1.1 Hours
1108	Compressor 2.1 Hours
1109	Compressor 3.1 Hours
-	EEV PID 1 controller status
-	EEV PID 2 controller status
-	EEV PID 3 controller status
-	Source EEV 1
-	Source EEV 2
-	User-side EEV
-	Bitmap Alarms 1.1
-	Bitmap Alarms 2.1
-	Bitmap Alarms 3.1
-	Bitmap Alarms 4.1










Nr.	DIGITAL INPUT
100	2nd Setpoint User-side
101	Recovery System Load
102	User-side System Load
103	Domestic Hot Water Request
104	Recovery Request
105	User-side Request
106	F.C. O. YV Cool
107	F.C. O. YV Heat
108	F.C. C. YV Cool
109	F.C. C. YV Heat
110	Free-cooling Flow
111	Recovery Flow
112	Source Flow
113	User-side Flow
114	Remote Heat/Cool
115	Remote On/Off
116	Phase Monitor
117	Free-cooling Pressure
118	Recovery Inverter Protection
119	Source Inverter Protection
120	User-side Inverter Protection
121	Free-cooling Pump 1 Protection
122	Recovery Pump 1 Protection
123	Source Pump 1 Protection
124	User-side Pump 1 Protection
125	Free-cooling Pump 2 Protection
126	Recovery Pump 2 Protection
127	User-side Pump 2 Protection
128	Free-cooling Pump 3 Protection
129	Recovery Pump 3 Protection
130	Source Pump 3 Protection
131	User-side Pump 3 Protection
132	Leak Detector
138	Source Pump 2 protection
139	Source System Load
1180	High Pressure 1.1
1181	Compressor 1.1 Protection
1182	Compressor 2.1 Protection
1184	Source Fan 1.1 Protection
2180	High Pressure 1.2
2181	Compressor 1.2 Protection
2183	Compressor 2.2 Protection
2184	Source Fan 1.2 Protection

Nr.	ANALOGIC INPUT
201	Demand Limit
202	User-side Differential Pressure switch
203	Free-cooling Water Temperature
204	External Air Temperature
205	Recovery In Temperature
206	Recovery Out Temperature
207	Cabinet Temperature
208	Water Reset
830	User-side In Temperature
831	User-side Out Temperature
885	Source In Temperature
886	Source Out Temperature
1201	Suction Pressure 1.1
1202	Suction Pressure 2.1
1203	Discharge Pressure 1.1
1204	Suction Temperature 1.1
1205	Suction Temp 2.1
1206	Suction Temperature 3.1
1207	Source In Temperature 1.1
1208	Recovery Liquid Temperature 1.1
1209	Source Out Temperature 1.1
1210	Discharge Temperature 1.1
1211	Discharge Temperature 2.1
2201	Suction Pressure 1.2
2202	Suction Pressure 2.2
2203	Discharge Pressure 1.2
2204	Suction Temperature 1.2
2205	Suction Temperature 2.2
2206	Suction Temperature 3.2
2207	Source In Temperature 1.2
2208	Recovery Liquid Temperature 1.2
2209	Source Out Temperature 1.2
2210	Discharge Temperature 1.2
2211	Discharge Temperature 2.2

Nr.	OUTPUT ANALOGICI
301	User-side YV Bypass
302	Grouped Alarms
303	Free-cooling Pump 1
304	Recovery Pump 1
305	Free-cooling Pump 2
306	Recovery Pump 2
307	Free-cooling Pump 3
308	Recovery Pump 3
309	Anti-freeze Heaters
310	Free-cooling Heaters
311	Cabinet Heating
312	Cabinet Fan
313	Domestic Hot Water Valve
314	Free-cooling Valve Open
315	Free-cooling Valve Close
318	YV 1 Cooling
319	YV 2 Heating
320	YV 3 Cooling
321	YV 4 Heating
1301	Aries / Defrost Injection 1.1
1302	Source Pump 1.1 Command
1303	Compressor 1.1 Command
1304	Compressor 2.1 Command
1305	Liquid Injection 1.1
1306	Liquid Injection 2.1
1307	RecValve Battery 1.1
1308	RecValve Chiller 1.1
1309	RecValve Recovery 1.1
1310	Reversing Cycle Valve 1.1
2301	Aries / Defrost Injection 1.2
2302	Source Pump 2.1 Command
2303	Compressor 1.2 Command
2304	Compressor 2.2 Command
2305	Liquid Injection 1.2
2306	Liquid Injection 2.2
2307	RecValve Battery 1.2
2308	RecValve Chiller 1.2
2309	RecValve Recovery 1.2
2310	Reversing Cycle Valve 1.2

Nr.	ANALOGIC OUTPUT
401	Free-cooling Valve
402	Recovery Pump Signal
1401	Source Fan 1.1
2401	Source Fan 1.2

 7.9 Keyboard settings

Step	Display	Action	Menu/Variable	Keys		Notes
1		Press 3 sec.				
2		Press				
3	HMI Settings	Select				
4		Press				
5		Press				
6		Select	Local connections			

7.10 Alarms



Before resetting an alarm identify and remove its cause.

Repeated resets can cause irreversible damage.




 

 

 

 

 



Example:

+ eE0001: Phase monitor: Fault = active alarm

- EE0003: Pum 1 faulty: Ok = resetted alarm

Display of alarm: step 1-3

Reset allarm: step 4-10

Step	Display	Action	Menu/Variable	Keys		Notes
1		Press				
2	Alarm list detail	Press				
3	Alarm list	Select	Alarm			
4	Alarm list detail	Press 3 sec.				
5	Password	Set	Enter password			
6	Alarm list detail	Press				
7	Alarm list	Select	Alarm			
8		Select	Reset Executed			
9		Press 3 sec.				
10	Password management	Select	Log off			

7.11 General list of alarms

ELECTRICAL CIRCUIT ALARMS			
Num	Name	Description	Category
eE0001	Phase monitor	Phase monitor fault	Central
EE0003	Pump 1 faulty	User side pump 1 overload protection	GP Ut
EE0004	Pump 2 faulty	User side pump 2 overload protection	GP Ut
EE0005	Pump 3 faulty	User side pump 3 overload protection	GP Ut
eE0008	Utility Inverter Protection	User side inverter overload protection	GP Ut
ee0010	Master Offline	Master unit offline	MS
ee0011	Unit 2 in alarm	2 nd slave unit fault	MS
ee0012	Unit 2 OffLine	2 nd slave unit offline	MS
ee0013	Unit 3 in alarm	3 rd slave unit fault	MS
ee0014	Unit 3 OffLine	3 rd slave unit offline	MS
ee0015	Unit 4 in alarm	4 th slave unit fault	MS
ee0016	Unit 4 OffLine	4 th slave unit offline	MS
ee0017	Unit 5 in alarm	5 th slave unit fault	MS
ee0018	Unit 5 OffLine	5 th slave unit offline	MS
ee0019	Unit 6 in alarm	6 th slave unit fault	MS
ee0020	Unit 6 OffLine	6 th slave unit offline	MS
ee0021	Unit 7 in alarm	7 th slave unit fault	MS
ee0022	Unit 7 OffLine	7 th slave unit offline	MS
ee0027	Utility Water In temp Error	User side in water temperature probe fault	Central
ee0028	Utility Water Out temp Error	User side out water temperature probe fault	Central
ee0029	Temp Ext Sensor Error	External air temperature probe fault	HW
ee0030	DemandLimit	Demand limit fault	HW
ee0031	WaterReset	Water reset fault	HW
ee0032	External Humidity probe Error	Relative humidity probe fault	HW
ee0033	T.Quadro Ele	Electrical panel temperature probe fault	HW
ee0035	YV Cool Open	YV Cool opening fault	4P
ee0036	YV Heat Open	YV Heat opening fault	4P
ee0037	YV Cool Close	YV Cool closing fault	4P
ee0038	YV Heat Close	YV Heat closing fault	4P
ee0040	FCI Water Temp.	Freecooling water temperature probe fault	HW FCI
EE0044	Pump 1 Allarm	Freecooling pump 1 overload protection	FCI Circuit 1
EE0045	Pump 2 Allarm	Freecooling pump 2 overload protection	FCI Circuit 1
EE0046	Pump 3 Allarm	Freecooling pump 3 overload protection	FCI Circuit 1
ee0047	Pump Change for Utility Flow	Switching pump on user side for flow alarm	GP User side
ee0050	P.DifferenzialeUtil	User side differential pressure sensore fault	HW
EE0054	Recovery Pump 1 protection	Recovery side pump 1 overload protection	Recovery
EE0055	Recovery Pump 2 protection	Recovery side pump 2 overload protection	Recovery
EE0056	Recovery Pump 3 protection	Recovery side pump 3 overload protection	Recovery
eE0057	Recovery Inverter Protection	Recovery side inverter overload protection	Recovery
ee0100	TimeOutModPOL98U	1 st POL98U module disconnected	HW TimeOut
ee0101	TimeOutModPOL98U_2	2 nd POL98U module disconnected	HW TimeOut
ee0102	TimeOutModPOL96U	POL96U module disconnected	HW TimeOut
ee0103	TimeOutModPOL945	POL945 module disconnected	HW TimeOut

ELECTRICAL CIRCUIT ALARMS			
Num	Name	Description	Category
ee0104	TimeOutModPOL965	POL965 module disconnected	HW TimeOut
ee0105	TimeOutModPOL94U	1 st POL94U module disconnected	HW TimeOut
ee0106	TimeOutModPOL94U_2	2 nd POL94U module disconnected	HW TimeOut
ee0107	TimeOutModPOL985	POL985 module disconnected	HW TimeOut
ee1001	T.Suction Gas	Gas temperature probe 3 fault	HW Circuit 1
ee1002	T.Suction Gas	Gas temperature probe 5 fault	HW Circuit 1
ee1003	P.Suction Heat	Pressure sensor fault, low pressure heating	HW Circuit 1
ee1004	EEV1 blocked	EEV 1 blocked	Circuit 1
ee1005	EEV1 blocked	EEV2 blocked	Circuit 1
EE1006	Comp 1 protections	Compressor 1 overload protection	Circuit 1
EE1007	Comp 2 protections	Compressor 2 overload protection	Circuit 1
EE1008	Comp 3 protections	Compressor 3 overload protection	Circuit 1
EE1009	Source Inverter Protection	Source side inverter overload protection	Source 1
ee1010	Pump Change for Source Flow	Switching pump on source side for flow alarm	Source 1
EE1013	Source Pump 1 protection	Source side pump 1 overload protection	Source 1
EE1014	Source Pump 2 protection	Source side pump 2 overload protection	Source 1
EE1015	Source Pump 3 protection	Source side pump 3 overload protection	Source 1
EE1018	Source side protection	Source side ventilation overload protection	Circuit 1
ee1022	T.Discharge C1.1	Compressor 1 discharge temperature probe fault	HW Circuit 1
ee1023	T.Discharge C2.1	Compressor 2 discharge temperature probe fault	HW Circuit 1
ee1024	T.Discharge C3.1	Compressor 3 discharge temperature probe fault	HW Circuit 1
ee1025	T.Source 1	Source 1 temperature probe fault	HW Circuit 1
ee1026	T.Source 2	Source 2 temperature probe fault	HW Circuit 1
ee1027	T.Suction Gas	Suction temperature probe fault	HW Circuit 1
ee1028	P.Discharge	High pressure probe fault	HW Circuit 1
ee1029	P.Suction	Low pressure probe fault	HW Circuit 1
ee1030	T.GasRecovery	Recovery exchanger gas temperature probe fault	HW Circuit 1
ee1031	P.GasRecovery	Recovery exchanger gas pressure probe fault	HW Circuit 1
ee1032	T.Ing Recovery	Recovery in temperature probe fault	HW Circuit 1
ee1033	T.Out Recovery	Recovery out temperature probe fault	HW Circuit 1
ee1037	Alarm Inverter 1	Inverter 1 in alarm	Inverter APY
ee1038	Alarm missing communication inv1	Inverter 1 Modbus communication error	Inverter APY
ee1039	Timeout communication inv1	Inverter 1 communication timeout	Inverter APY
ee1040	Alarm Inverter 2	Inverter 2 in alarm	Inverter APY
ee1041	Alarm missing communication inv2	Inverter 2 Modbus communication error	Inverter APY
ee1042	Timeout communication inv2	Inverter 2 communication timeout	Inverter APY
ee1043	Alarm Inverter 3	Inverter 3 in alarm	Inverter APY
ee1044	Alarm missing communication inv3	Inverter 3 Modbus communication error	Inverter APY
ee1045	Timeout communication inv3	Inverter 3 communication timeout	Inverter APY
EE1047	Alarm Envelop Comp1	Compressor 1 envelope alarm	Circuit 1
EE1048	Alarm Envelop Comp2	Compressor 2 envelope alarm	Circuit 1
EE1049	Alarm Envelop Comp3	Compressor 3 envelope alarm	Circuit 1
ee1055	Alarm Inverter 1	Inverter 1 in alarm	Inverter DFS
ee1056	Alarm missing communication inv1	Inverter 1 Modbus communication error	Inverter DFS
ee1057	Timeout communication inv1	Inverter 1 communication timeout	Inverter DFS

ELECTRICAL CIRCUIT ALARMS			
Num	Name	Description	Category
ee1058	Alarm Inverter 2	Inverter 2 in alarm	Inverter DFS
ee1059	Alarm missing communication inv2	Inverter 2 Modbus communication error	Inverter DFS
ee1060	Timeout communication inv2	Inverter 2 communication timeout	Inverter DFS
ee1061	Alarm Inverter 3	Inverter 3 in alarm	Inverter DFS
ee1062	Alarm missing communication inv3	Inverter 3 Modbus communication error	Inverter DFS
ee1063	Timeout communication inv3	Inverter 3 communication timeout	Inverter DFS
ee1070	User side ECV 1.1	User side ECV connection problem	HW Circuit 1
ee1071	Source ECV 1.1	Source side ECV 1 connection problem	HW Circuit 1
ee1072	Source ECV 2.1	Source side ECV 2 connection problem	HW Circuit 1
ee2001	T.Suction Gas	Gas temperature probe 4 fault	HW Circuit 2
ee2002	T.Suction Gas	Gas temperature probe 6 fault	HW Circuit 2
ee2003	P.Suction Heat	Pressure sensor fault, low pressure heating	HW Circuit 2
ee2004	EEV1 blocked	EEV1 blocked	Circuit 2
ee2005	EEV1 blocked	EEV2 blocked	Circuit 2
EE2006	Comp 1 protections	Compressor 1 overload protection	Circuit 2
EE2007	Comp 2 protections	Compressor 2 overload protection	Circuit 2
EE2008	Comp 3 protections	Compressor 3 overload protection	Circuit 2
EE2009	Source Inverter Protection	Source side inverter overload protection	Source 2
ee2010	Pump Change for Source Flow	Switching pump on source side for flow alarm	Source 2
EE2013	Source Pump 1 protection	Source side pump 1 overload protection	Source 2
EE2014	Source Pump 2 protection	Source side pump 2 overload protection	Source 2
EE2015	Source Pump 3 protection	Source side pump 3 overload protection	Source 2
EE2018	Source side protection	Source side ventilation overload protection	Circuit 2
ee2022	T.Discharge C1.1	Compressor 1 discharge temperature probe fault	HW Circuit 2
ee2023	T.Discharge C2.1	Compressor 2 discharge temperature probe fault	HW Circuit 2
ee2024	T.Discharge C3.1	Compressor 3 discharge temperature probe fault	HW Circuit 2
ee2025	T.Source 1	Source 1 temperature probe fault	HW Circuit 2
ee2026	T.Source 2	Source 2 temperature probe fault	HW Circuit 2
ee2027	T.Suction Gas	Suction gas temperature probe fault	HW Circuit 2
ee2028	P.Discharge	High pressure probe fault	HW Circuit 2
ee2029	P.Suction	Low pressure probe fault	HW Circuit 2
ee2030	T.GasRecovery	Recovery exchanger gas temperature probe fault	HW Circuit 2
ee2031	P.GasRecovery	Recovery exchanger gas pressure probe fault	HW Circuit 2
ee2032	T.Ing Recovery	Recovery in temperature probe fault	HW Circuit 2
ee2033	T.Out Recovery	Recovery out temperature probe fault	HW Circuit 2
ee2037	Alarm Inverter 1	Inverter 1 in alarm	Inverter APY
ee2038	Alarm missing communication inv1	Inverter 1 Modbus communication error	Inverter APY
ee2039	Timeout communication inv1	Inverter 1 communication timeout	Inverter APY
ee2040	Alarm Inverter 2	Inverter 2 in alarm	Inverter APY
ee2041	Alarm missing communication inv2	Inverter 2 Modbus communication error	Inverter APY
ee2042	Timeout communication inv2	Inverter 2 communication timeout	Inverter APY

ELECTRICAL CIRCUIT ALARMS			
Num	Name	Description	Category
ee2043	Alarm Inverter 3	Inverter 3 in alarm	Inverter APY
ee2044	Alarm missing comunication inv3	Inverter 3 Modbus communication error	Inverter APY
ee2045	Timeout comunication inv3	Inverter 3 communication timeout	Inverter APY
EE2047	Alarm Envelop Comp1	Compressor 1 envelope alarm	Circuit 2
EE2048	Alarm Envelop Comp2	Compressor 2 envelope alarm	Circuit 2
EE2049	Alarm Envelop Comp3	Compressor 3 envelope alarm	Circuit 2
ee2055	Alarm Inverter 1	Inverter 1 in alarm	Inverter DFS
ee2056	Alarm missing comunication inv1	Inverter 1 Modbus communication error	Inverter DFS
ee2057	Timeout comunication inv1	Inverter 1 communication timeout	Inverter DFS
ee2058	Alarm Inverter 2	Inverter 2 in alarm	Inverter DFS
ee2059	Alarm missing comunication inv2	Inverter 2 Modbus communication error	Inverter DFS
ee2060	Timeout comunication inv2	Inverter 2 communication timeout	Inverter DFS
ee2061	Alarm Inverter 3	Inverter 3 in alarm	Inverter DFS
ee2062	Alarm missing comunication inv3	Inverter 3 Modbus communication error	Inverter DFS
ee2063	Timeout comunication inv3	Inverter 3 communication timeout	Inverter DFS
ee2070	User side ECV 1.1	User side ECV connection problem	HW Circuit 2
ee2071	Source ECV 1.1	Source side ECV 1 connection problem	HW Circuit 2
ee2072	Source ECV 2.1	Source side ECV 2 connection problem	HW Circuit 2

REFRIGERANT CIRCUIT ALARMS			
Num	Name	Description	Category
ff1005	Min overheating EEV1	Value of refrigerant superheat too low EEV1 (user side)	Circuit 1
ff1006	Min overheating EEV2	Value of refrigerant superheat too low EEV1 (source)	Circuit 1
ff1009	Low Pressure Alarm (DI)	Low Pressure Alarm (DI)	Circuit 1
ff1010	Warning LP Cool	Low Pressure Pre Alarm in Cooling Mode	Circuit 1
ff1011	Warning LP Heat	Low Pressure Pre Alarm in Heating Mode	Circuit 1
ff1012	Low pressure Alarm Heat (AI)	Low Pressure in Heating Mode (AI)	Circuit 1
ff1013	High Pressure (DI)	High Pressure Alarm (DI)	Circuit 1
ff1014	Warning High Pressure	High Pressure Pre Alarm	Circuit 1
ff1015	High Pressure Alarm (AI)	High Pressure Alarm (AI)	Circuit 1
ff1016	Max RC Warning	Maximum Pressure Ratio Pre Alarm	Circuit 1
ff1017	Min RC Alarm	Minimum Pressure Ratio Pre Alarm	Circuit 1
ff1018	Low Pressure Alarm Cool(AI)	Low Pressure Alarm in Cooling Mode	Circuit 1
FF1019	Max RC Alarm	Maximum Pressure Ratio	Circuit 1
FF1034	Vacuum Circuit	Vaacum Alarm	Circuit 1
FF1046	LimLp	Low pressure limit	Circuit 1
ff1047	DFRForced	Defrost Forced	Circuit 1
ff1048	DFRWaterTLow	Low water temperature for defrost operation	Circuit 1
ff1049	DFRTimeMax	Defrost Maximum Time	Circuit 1

REFRIGERANT CIRCUIT ALARMS			
Num	Name	Description	Category
ff2005	Min overheating EEV1	Min Superheat value (user side)	Circuit 2
ff2006	Min overheating EEV2	Min Superheat value (source)	Circuit 2
ff2009	Low Pressure Alarm (DI)	Low pressure Alarm (DI)	Circuit 2
ff2010	Warning LP Cool	Low pressure Pre Alarm CoolingMode	Circuit 2
ff2011	Warning LP Heat	Low pressure Pre Alarm HeatingMode	Circuit 2
ff2012	Low pressure Alarm Heat (AI)	Low pressure Pre Alarm Heating Mode (AI)	Circuit 2
ff2013	High Pressure (DI)	High pressure Alarm (DI)	Circuit 2
ff2014	Warning High Pressure	High pressure Pre Alarm	Circuit 2
ff2015	High Pressure Alarm (AI)	High pressure Alarm (AI)	Circuit 2
ff2016	Max RC Warning	Maximum pressure Ratio Pre Alarm	Circuit 2
ff2017	Min RC Alarm	Minimum pressure Ratio Pre Alarm	Circuit 2
ff2018	Low Pressure Alarm Cool(AI)	Low Pressure Alarm Cooling Mode	Circuit 2
FF2019	Max RC Alarm	Maximum Pressure Radio	Circuit 2
FF2034	Vacuum Circuit	Vaacum Alarm	Circuit 2
FF2046	LimLp	Low pressure limit	Circuit 2
ff2047	DFRForced	Defrost Forced	Circuit 2
ff2048	DFRWaterTLow	Low water temperature for defrost	Circuit 2
ff2049	DFRTimeMax	Defrost Time	Circuit 2

HYDRAULIC CIRCUIT ALARMS			
Num	Name	Description	Category
ii0002	Water pressure	User side low water pressure	GP Ut
ii0006	Flow switch utility side	User side low flow rate	GP Ut
II0007	Freeze alarm	User side Water Frost Protection	Centrale
ii0008	Pumps antifreeze alarm	Pump activation Water Frost Protection	Centrale
II0009	Inconsistent deltaT across the exchanger	Water outlet temperature, discordant with the current operation mode, user side	Centrale
II0042	Pressure allarm	Freecooling low water pressure	FCI Circuito 1
II0043	Freeze alarm	Freecooling water frost protection	FCI Circuito 1
ii0047	Flow switch allarm	Freecooling water low flow rate	FCI Circuito 1
ii0052	Recovery Low H2O Flow	Recovery water low flow rate	Recupero
ii0053	Recovery Low Pressure Plant	Recovery low water pressure	Recupero
ii1017	Source Low Pressure Plant	Source low water pressure	Sorgente 1
ii1020	Source Low H2O Flow	Source side low water flow	Sorgente 1
II1021	Source H2O Freeze Alarm	Source side water frost protection	Sorgente 1
ii2017	Source Low Pressure Plant	Source low water pressure	Sorgente 2
ii2020	Source Low H2O Flow	Source side low water flow	Sorgente 2
II2021	Source H2O Freeze Alarm	Source side water frost protection	Sorgente 2

8 Maintenance

8.1 General description

Maintenance must be done by authorized centres or by qualified personnel.

The maintenance allows to:

- maintain the unit efficiency
- increase the life span of the equipment
- assemble information and data to understand the state of the unit efficiency and avoid possible damages

Before checking, please verify the following:

- the electrical power supply line should be isolated at the beginning
- the unit isolator is open, locked and equipped with the suitable warning
- make sure no tension is present



After turning off the power, wait at least 5 minutes before accessing to the electrical panel or any other electrical component.



Before accessing check with a multimeter that there are no residual stresses.

8.2 Inspections frequency

Perform an inspection every 6 months minimum.

The frequency, however, depends on the use.



In the event of frequent use it is recommended to plan inspections at shorter intervals:

- frequent use (continuous or very intermittent use, near the operating limits, etc)
- critical use (service necessary)

√	intervention frequency (months)	1	6	12
1	presence corrosion			X
2	panel fixing			X
3	water filter cleaning		X	
4	water: quality, ph, weight of glycol (%)		X	
5	check the exchanger efficiency			X
6	circulating pumps		X	
7	check of the fixing and the insulation of the power lead			X
8	check of the earthing cable			X
9	electric panel cleaning			X
10	capacity contactor status			X
11	termina closing, cable insulation integrity			X
12	voltage and phase unbalancing (no load and on-load)		X	
13	absorptions of the single electrical loads		X	
14	test of the compressor crankcase heaters		X	
15	Checking for leaks			*
16	survey of the refrigerant circuit operating parameters		X	
17	safety valve			*
18	protective device test: pressure switches, thermostats, flow switches etc..		X	
19	control system test: setpoint, climatic compensations, capacity stepping, water / air flow-rate variations		X	
20	control device test: alarm signalling, thermometers, probes, pressure gauges etc..		X	

* Refer to the local regulations; and ensure correct adherence. Companies and technicians that effect interventions of installation, maintenance/re-pairs, leak control and recovery must be CERTIFIED as expected by the local regulations. The leak control must be effected with annual renewal.

8.3 Unit booklet

It's advisable to create a unit booklet to take notes of the unit interventions.

In this way it will be easier to adequately note the various interventions and aid any troubleshooting.

Report on the booklet:

- date
- intervention description
- carried out measures etc.

8.4 Standby mode

If a long period of inactivity is foreseen:

- turn off the power
- avoid the risk of frost (empty the system or add glycol)

Turn off the power to avoid electrical risks or damages by lightning strikes.



With lower temperatures keep heaters turned on in of the electrical panel (option).

It's recommended that the re-start after the stopping period is performed by a qualified technician, especially after seasonal stops or seasonal switching.

When restarting, refer to what is indicated in the "start-up" section.

Schedule technical assistance in advance to avoid hitches and to guarantee that the system can be used when required.

8.5 Water side exchanger

It is very important for the exchanger to be able to provide the maximum thermal exchange, therefore it is essential for the inner surfaces to be clean of dirt and incrustations.

Periodically check the difference between the temperature of the supply water and the condensation temperature: if the difference is greater than 8°C–10°C it is advisable to clean the exchanger.

The clearing must be effected:

- with circulation opposite to the usual one
- with a speed at least 1,5 times higher than the nominal one
- with an appropriate product moderately acid (95% water + 5% phosphoric acid)
- after the cleaning rinse with water to inhibit the action of any residual product

8.6 Circulating pumps

Check:

- no leaks
- bearing status (anomalies are highlighted by abnormal noise and vibration)
- the terminal protection covers are closed and the cable holders are properly positioned

8.7 Insulations

Check the condition of the insulations: if necessary apply glue and and renew the seals.

8.8 Water filter

Check that no impurities prevent the correct passage of water.

8.9 Flow Switch

- controls the operations
- remove incrustations from the palette

8.10 Compressor supply line shut-off valve



A. Supply line shut-off valve



Do not remove the seal
Remove only if authorized by the manufacturer.
Please contact the maker for informations.


8.11 crankcase heater

Check:

- closure
- Operation



8.12 Copeland scroll compressor

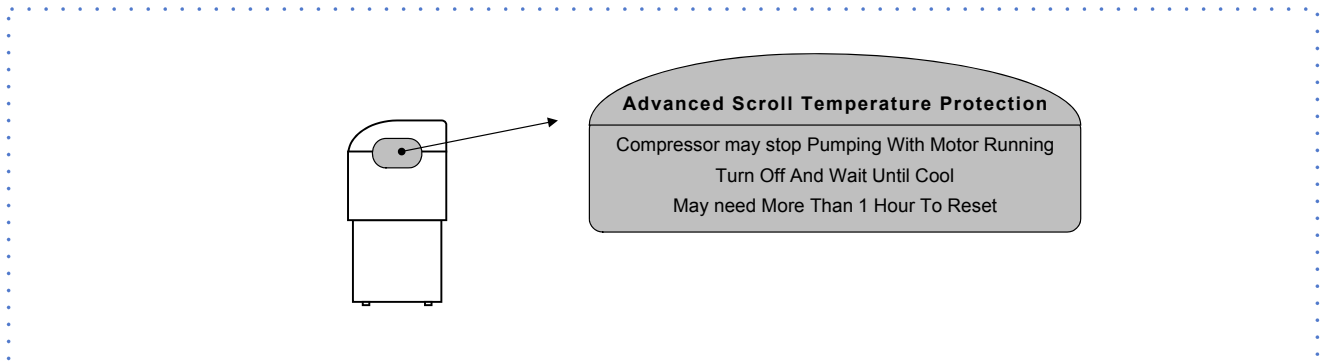

8.13 System discharge

1. evacuate the system
2. evacuate the exchanger, use all the present taps
3. use compressed air to blow the exchanger
4. dry completely the exchanger by an hot air jet; for greater safety fill the exchanger with glycoled solution
5. protect the exchanger from the air
6. remove the drain plugs to the pumps




Any anti-freeze liquid contained in the system should not be discharged freely as it is a pollutant.

It must be collected and reused.

Before starting a washing the plant.

Example

- emptying pump

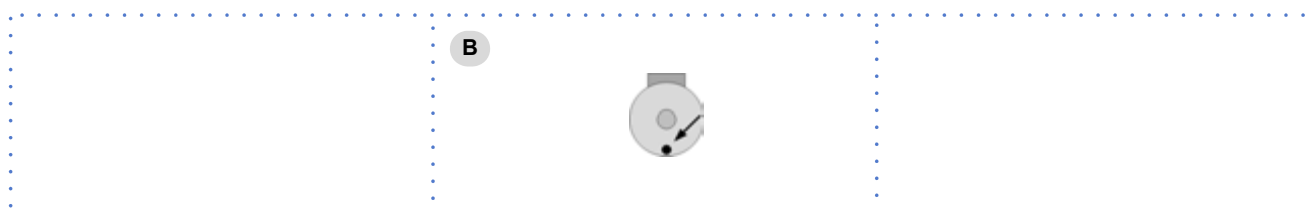

It's recommended that the re-start after the stopping period is performed by a qualified technician, especially after seasonal stops or seasonal switching.


When restarting, refer to what is indicated in the "start-up" section.

Schedule technical assistance in advance to avoid hitches and to guarantee that the system can be used when required.

9 Accessories

9.1 User side hydronic unit configurations

- 1 standard unit
- 2 VARYFLOW + 2 inverter pumps

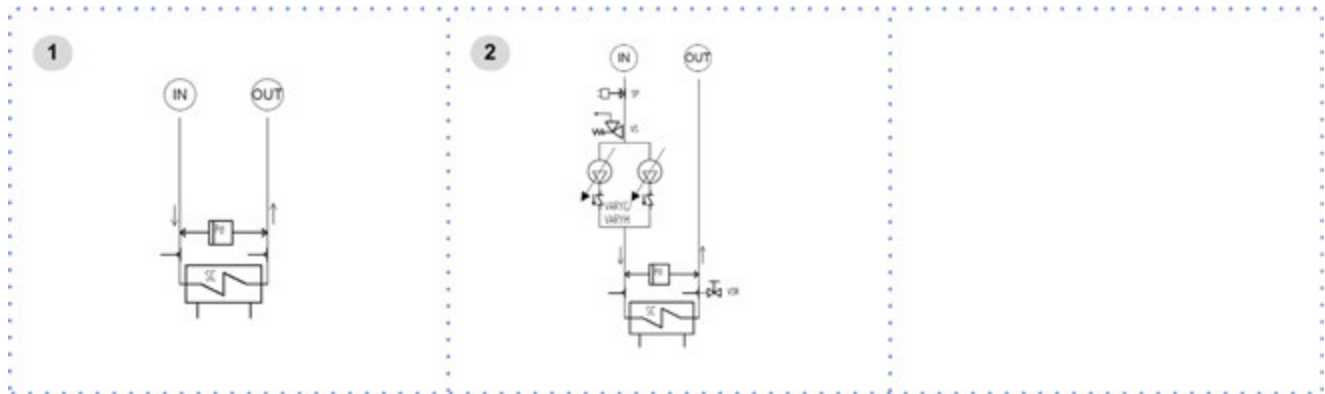


SP pressure switch of the charged system
 PD Differential pressure switch
 SC plate exchanger

VSU safety valve
 VSR Drain valve

9.2 Recovery side hydronic unit configurations

- 1 standard unit
- 2 VARYFLOW + 2 inverter pumps

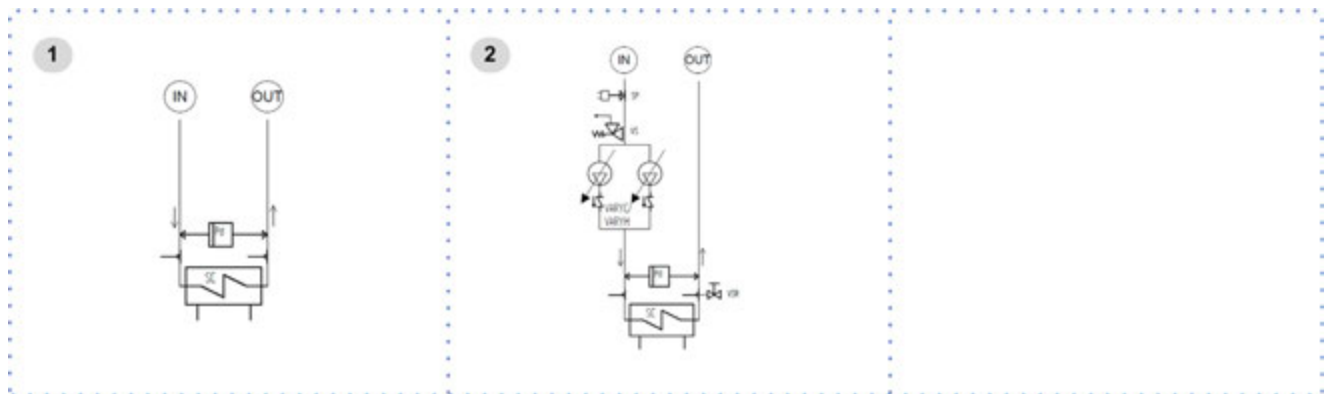


SP pressure switch of the charged system
 PD Differential pressure switch
 SC plate exchanger

VSU safety valve
 VSR Drain valve

9.3 Source side hydhydraulic assembly configurations

- 1 standard unit
- 2 VARYFLOW + (heating side 2 inverter pumps)
- 3 Source side hydronic assembly with 1 ON/OFF pump
- 4 Source side hydronic assembly with 2 ON/OFF pumps
- 5 Source side 3-way modulating valve
- 6 Source side 2-way modulating valve

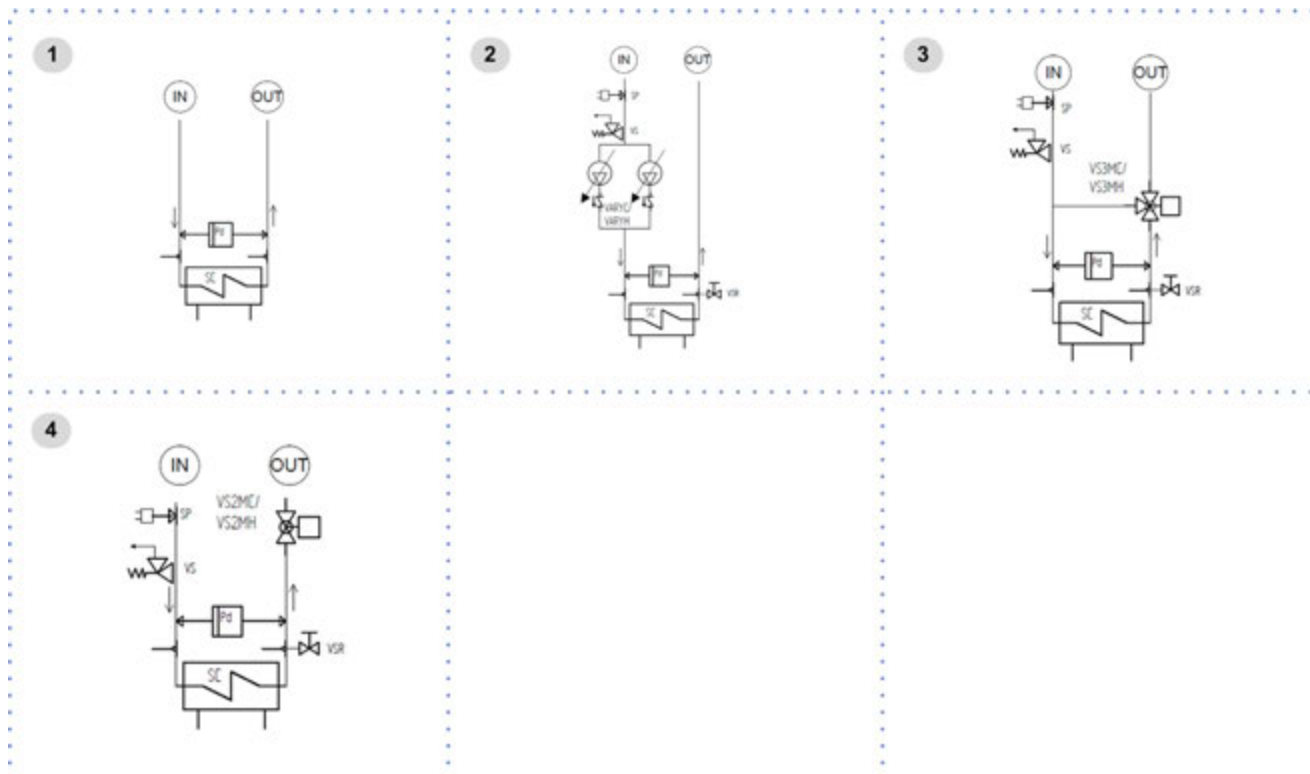


SP pressure switch of the charged system
 PD Differential pressure switch
 SC plate exchanger

VSS safety valve
 VSR Drain valve

9.4 Source side 3-way modulating valve

UNIT : source side



SYSTEM : source side

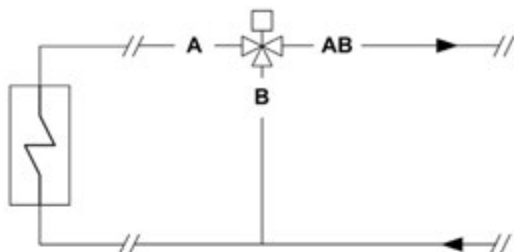



Parameters settings

Par.	Description	Value
21	Enable source signal	1
513	Flow control: with valve = 1	1
505	Min source signal (%)	50
506	Max source signal (%)	100

Size 10.2 – 40.2

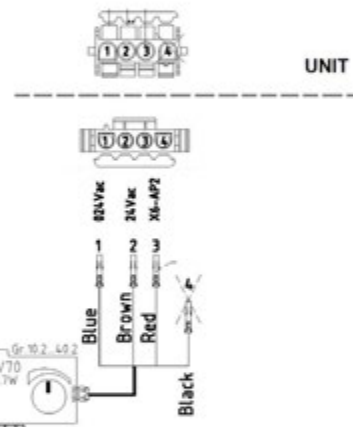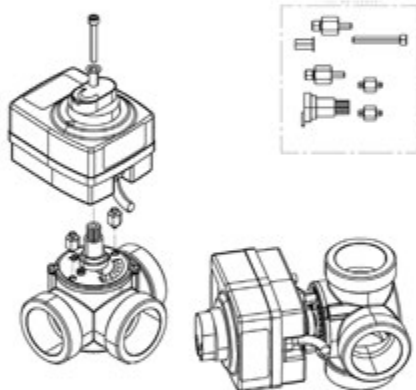


Size 43.2 – 120.2

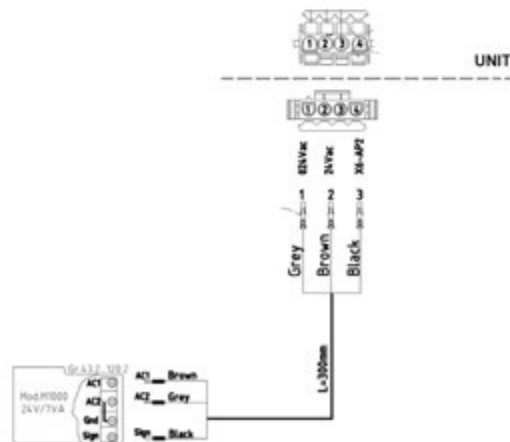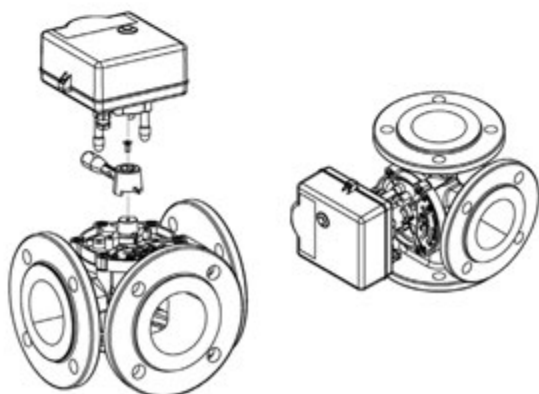

9.5 Source side 2-way modulating valve

UNIT : source side



SYSTEM : source side

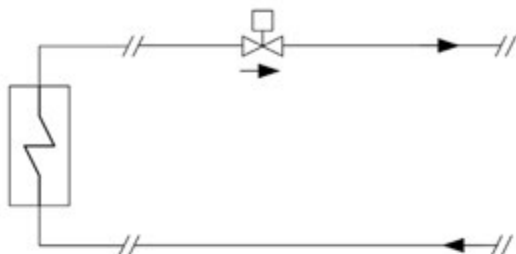



Parameters settings

Par.	Description	Value
21	Enable source signal	1
513	Flow control: with valve = 1	1
505	Min source signal (%)	50
506	Max source signal (%)	100

Size 10.2 – 40.2

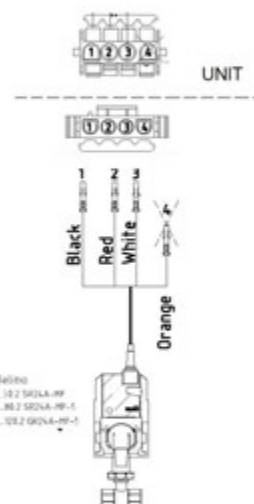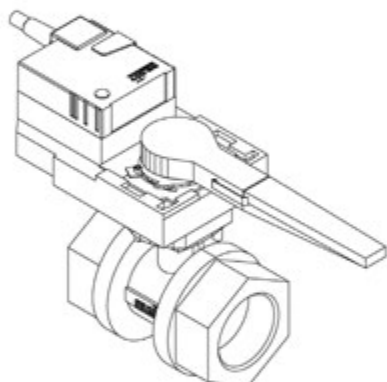


Size 43.2 – 120.2

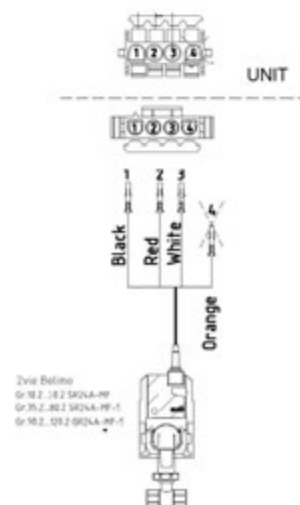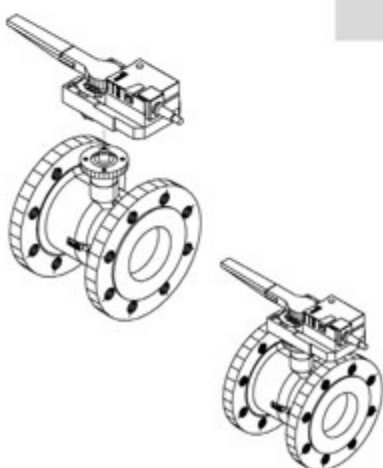

9.6 VALVE FOR DOMESTIC HOT WATER




UNIT : recovery side

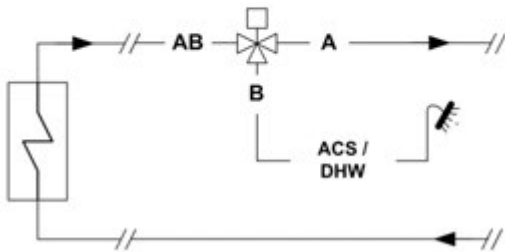




Parameters settings

Par.	Description	Value
23	Enable domestic hot water!	1
580	Setpoint	

Size 10.2 – 40.2

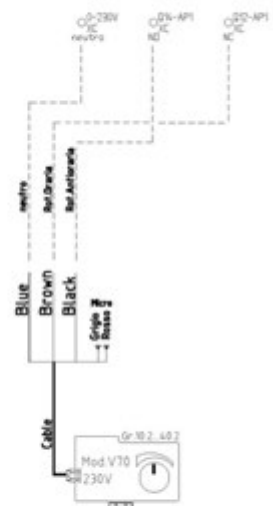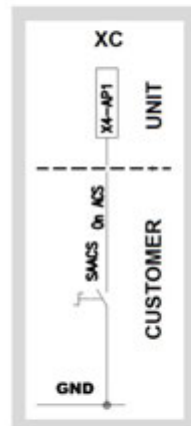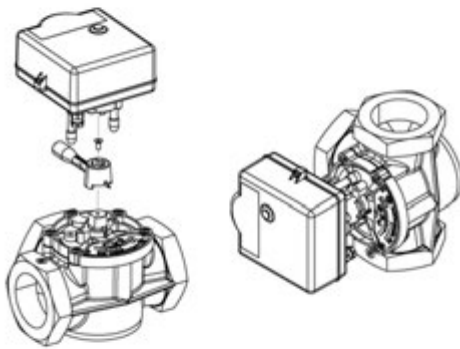

Size 43.2 – 120.2

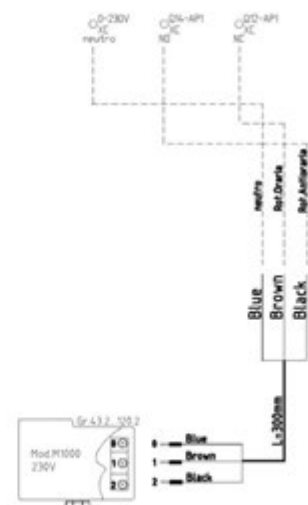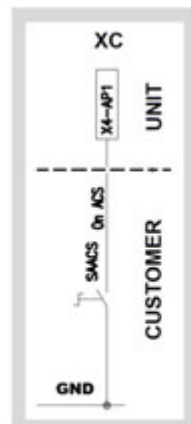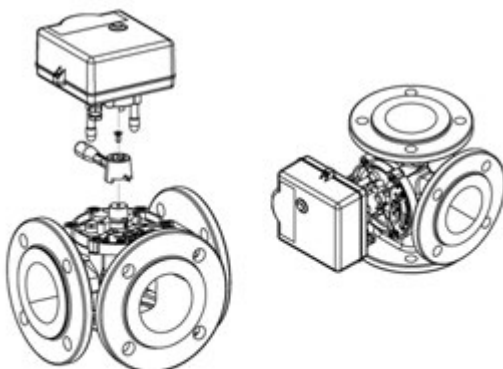

9.7 NATURAL COOLING function

Enabling the Natural Cooling functions, the unit is able to independently manage a system for cold production using source water in the event the temperature conditions of the fluid are favorable.

In this case, the source is managed as if it were the first unit available capacity step and can be used to cover the 100% of the cooling load or also, in integration to the compressors, to cover a part of the cold demand by resetting or reducing the compressor power input.

The Natural Cooling installation should include the following additional components (not supplied by Clivet):

1) Natural Cooling water/water exchanger (SCNC in the main scheme): this exchanger shall be suitably dimensioned according to the fluid temperature, user and source side, and according to the pressure drop of the remaining part of the installation and to the unit available static pressure if pumps are not built-in.

2) Two 3-way on/off or equivalent valves (VNCS and VNCU in the main scheme): one on the source circuit and one on the user circuit. Also these have to be suitably dimensioned according to the expected flow rates.

For the correct operation of the Natural Cooling function, the set point control must be set on supply (parameter 436 Tiporeg).

In the installation set up phase it will be necessary to remotely the probe on the source input water upstream of the switching valve source side (VNCS).

The unit can be selected with or without hydronic assemblies user and source side: the system must be able to absorb/manage the flow rate/head variations due to the heater change after the Natural Cooling exchanger insertion and exclusion.


The unit control provides an on/off signal to enable the Natural Cooling by switching the valves.

The Natural Cooling is enabled if the two following conditions are satisfied:

1) the entering water temperature, source side, must be lower than the cooling set point plus a delta defined by parameter 365 DeltaNC (the value can be positive or negative) $[T_{ws_in} < (Set_cooling + \Delta NC)]$

2) the entering water temperature, user side, must be higher than the entering water temperature, source side, plus a delta defined by parameter 366 IsteresiStopNC (the value can be only positive) $[T_{ws_in} < (T_{wu_in} + IsteresiStopNC)]$

If one of these two conditions is not satisfied the Natural Cooling is disabled.

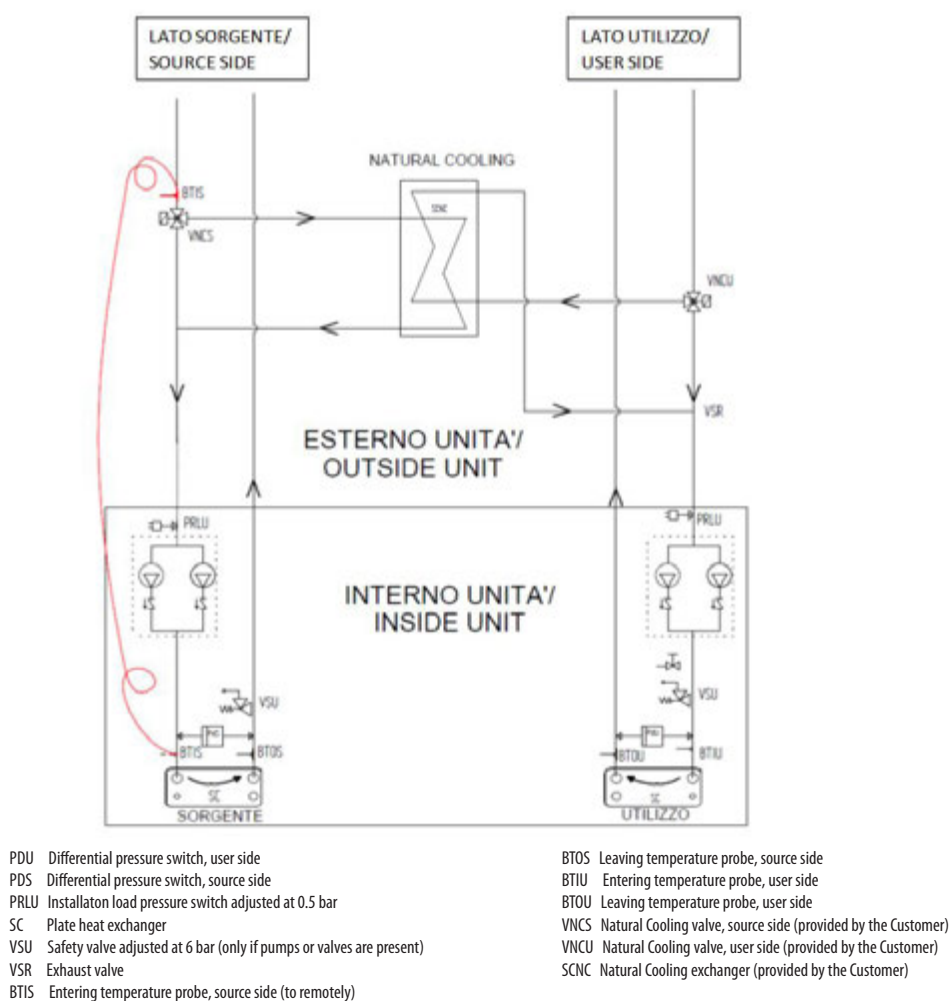

10 Decommissioning

10.1 Disconnecting

Only authorised personnel must disconnect the unit.

Avoid leak or spills into the environment.

Before disconnecting the unit, the following must be recovered, if present:

- refrigerant gas
- anti-freeze solutions in the water circuit

Awaiting dismantling and disposal, the unit can also be stored outdoors, if the electrical, cooling and water circuits of the unit have 100% integrity and are isolated, bad weather and rapid change in temperature will not result in any environmental impact.

10.2 Dismantling and disposal

The unit must always be sent to authorised centres for dismantling and disposal.

When dismantling the unit, the fan, the motor and the coil, if operating, may be recovered by the specialist centres for reuse.

All the materials must be recovered or disposed of in compliance with the corresponding national standards in force.

For further information on the decommissioning of the unit, contact the manufacturer.

10.3 Directive EC RAEE

The units covered by the legislation in question are marked with the symbol on the side.

With the aim of protecting the environment, all of our units are produced in compliance with Directive EC on waste electrical and electronic equipment (RAEE).

The potential effects on the environment and on human health due to the presence of hazardous substances are shown in the use and maintenance manual in the section on residual risks.

Information in addition to that indicated below, if required, can be obtained from the manufacturer/distributor/importer, who are responsible for the collection/handling of waste originating from equipment covered by EC-RAEE. This information is also available from the retailer who sold this appliance or from the local authorities who handle waste.

Directive EC-RAEE requires disposal and recycling of electrical and electronic equipment as described therein to be handled through appropriate collection, in suitable centres, separate from collection for the disposal of mixed urban waste.

The user must not dispose of the unit at the end of its life cycle as urban waste, it must instead be handed over to appropriate collection centres as set forth by current standards or as instructed by the distributor.



11 Residual risks

General description

In this section the most common situations are indicated, as these cannot be controlled by the manufacturer and could be a source of risk situations for people or things.

Danger zone

This is an area in which only an authorised operator may work.

The danger zone is the area inside the unit which is accessible only with the deliberate removal of protections or parts thereof.

Handling

The handling operations, if implemented without all of the protection necessary and without due caution, may cause the drop or the tipping of the unit with the consequent damage, even serious, to persons, things or the unit itself.

Handle the unit following the instructions provided in the present manual regarding the packaging and in compliance with the local regulations in force. Should the refrigerant leak please refer to the refrigerant "Safety sheet".

Installation

The incorrect installation of the unit could cause water leaks, condensate accumulation, leaking of the refrigerant, electric shock, poor operation or damage to the unit itself.

Check that the installation has been implemented by qualified technical personnel only and that the instructions contained in the present manual and the local regulations in force have been adhered to.

The installation of the unit in a place where even infrequent leaks of inflammable gas and the accumulation of this gas in the area surrounding the area occur could cause explosions or fires.

Carefully check the positioning of the unit.

The installation of the unit in a place unsuited to support its weight and/or guarantee adequate anchorage may result in consequent damage to things, people or the unit itself.

Carefully check the positioning and the anchoring of the unit.

Easy access to the unit by children, unauthorised persons or animals may be the source of accidents, some serious.

Install the unit in areas which are only accessible to authorised person and/or provide protection against intrusion into the danger zone.

General risks

Smell of burning, smoke or other signals of serious anomalies may indicate a situation which could cause damage to people, things or the unit itself.

Electrically isolate the unit (yellow-red isolator).

Contact the authorised service centre to identify and resolve the problem at the source of the anomaly.

Accidental contact with exchange batteries, compressors, air delivery tubes or other components may cause injuries and/or burns.

Always wear suitable clothing including protective gloves to work inside the danger zone.

Maintenance and repair operations carried out by non-qualified personnel may cause damage to persons, things or the unit itself.

Always contact the qualified assistance centre.

Failing to close the unit panels or failure to check the correct tightening of all of the panelling fixing screws may cause damage to persons, things or the unit itself.

Periodically check that all of the panels are correctly closed and fixed.

If there is a fire the temperature of the refrigerant could reach values that increase the pressure to beyond the safety valve with the consequent possible projection of the refrigerant itself or explosion of the circuit parts that remain isolated by the closure of the tap.

Do not remain in the vicinity of the safety valve and never leave the refrigerating system taps closed.

Electric parts

An incomplete attachment line to the electric network or with incorrectly sized cables and/or unsuitable protective devices can cause electric shocks, intoxication, damage to the unit or fires.

Carry out all of the work on the electric system referring to the electric layout and the present manual ensuring the use of a system thereto dedicated.

An incorrect fixing of the electric components cover may lead to the entry of dust, water etc inside and may consequently electric shocks, damage to the unit or fires.

Always fix the unit cover properly.

When the metallic mass of the unit is under voltage and is not correctly connected to the earthing system it may be as source of electric shock and electrocution.

Always pay particular attention to the implementation of the earthing system connections.

Contact with parts under voltage accessible inside the unit after the removal of the guards can cause electric shocks, burns and electrocution.

Open and padlock the general isolator prior to removing the guards and signal work in progress with the appropriate sign.

Contact with parts that could be under voltage due to the start up of the unit may cause electric shocks, burns and electrocution.

When voltage is necessary for the circuit open the isolator on the attachment line of the unit itself, padlock it and display the appropriate warning sign.

Moving parts

Contact with the transmissions or with the fan aspiration can cause injuries.

Prior to entering the inside of the unit open the isolator situated on the connection line of the unit itself, padlock and display the appropriate warning sign.

Contact with the fans can cause injury.

Prior to removing the protective grill or the fans, open the isolator on the attachment line of the unit itself, padlock it and display the appropriate warning sign.

Refrigerant

The intervention of the safety valve and the consequent expulsion of the gas refrigerant may cause injuries and intoxication.

Always wear suitable clothing including protective gloves and eyeglasses for operations inside the danger zone.

Should the refrigerant leak please refer to the refrigerant "Safety sheet".

Contact between open flames or heat sources with the refrigerant or the heating of the gas circuit under pressure (e.g. during welding operations) may cause explosions or fires.

Do not place any heat source inside the danger zone.

The maintenance or repair interventions which include welding must be carried out with the system off.

Hydraulic parts

Defects in tubing, the attachments or the removal parts may cause a leak or water projection with the consequent damages to people, things or shortcircuit the unit.

Configuration for 2-system and 4-pipe system

General technical data - Groundwater version

Size			10.2	12.2	14.2	16.2	19.2	22.2	27.2	30.2	35.2	40.2	43.2	45.2	50.2	55.2	60.2	70.2	80.2	90.2	100.2	120.2
Cooling 100% - Heating 0%																						
Cooling capacity	1	kW	29,9	34,4	41,4	48,2	57,4	66,5	81,3	91,6	105	120	131	142	155	167	190	215	242	271	296	345
Total power input	2	kW	6,25	7,34	8,84	10,3	12,0	14,8	17,2	19,7	22,9	26,0	29,0	30,7	33,3	36,8	41,5	47,0	53,3	60,1	68,1	81,8
EER at full load	3		4,78	4,69	4,68	4,68	4,78	4,49	4,73	4,65	4,60	4,61	4,53	4,63	4,64	4,54	4,59	4,56	4,53	4,52	4,34	4,22
Water flow-rate internal exchanger/cold	1	l/s	1,43	1,64	1,98	2,30	2,74	3,18	3,88	4,38	5,03	5,72	6,28	6,78	7,39	7,98	9,09	10,2	11,5	13,0	14,1	16,5
Water flow-rate external exchanger	1	l/s	1,73	1,99	2,40	2,80	3,32	3,88	4,71	5,32	6,13	6,97	7,66	8,25	8,98	9,74	11,1	12,5	14,1	15,8	17,4	20,4
Cooling 0% - Heating 100%																						
Heating capacity	4	kW	34,3	40,3	48,0	56,6	66,8	79,2	93,7	106	119	139	152	163	179	195	218	252	279	314	343	408
Total power input	2	kW	7,72	9,02	10,7	12,4	14,5	17,4	20,3	23,3	26,8	30,7	34,1	36,3	39,2	43,3	48,9	54,9	61,5	71,1	79,6	96,2
COP at full load	5		4,44	4,47	4,49	4,56	4,61	4,55	4,62	4,57	4,46	4,51	4,44	4,48	4,56	4,50	4,45	4,59	4,53	4,42	4,31	4,25
ErP Space Heating Energy Class - AVERAGE Climate - W35	9		A++	A++	A++	A++	A++	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
ErP Space Heating Energy Class - AVERAGE Climate - W55	9		A++	A++	A++	A++	A++	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Water flow-rate recovery exchanger/hot	4	l/s	1,64	1,93	2,29	2,70	3,19	3,78	4,48	5,08	5,70	6,62	7,24	7,77	8,53	9,30	10,4	12,0	13,3	15,0	16,4	19,5
Water flow-rate external exchanger	4	l/s	2,12	2,49	2,97	3,52	4,16	4,92	5,84	6,62	7,37	8,58	9,35	10,1	11,1	12,1	13,4	15,7	17,3	19,4	21,0	24,9
Cooling 100% - Heating 100%																						
Cooling capacity	6	kW	27,2	31,3	37,4	43,9	52,1	61,2	73,8	83,0	95,2	108	118	128	140	151	174	195	219	248	267	314
Heating capacity	6	kW	35,0	40,4	48,3	56,4	66,7	78,8	94,4	107	123	139	153	165	179	195	223	251	282	321	347	411
Total power input	2	kW	7,75	9,12	10,9	12,5	14,6	17,6	20,6	23,8	27,3	31,1	34,5	36,7	39,7	43,9	49,1	55,8	63	72,1	80,4	96,8
Overall efficiency	7		8,03	7,86	7,86	8,02	8,14	7,95	8,16	7,98	7,97	7,95	7,86	7,97	8,03	7,88	8,10	7,99	7,96	7,89	7,63	7,48
Water flow-rate internal exchanger/cold	6	l/s	1,30	1,49	1,79	2,10	2,49	2,92	3,52	3,97	4,55	5,16	5,66	6,11	6,67	7,22	8,33	9,32	10,5	11,9	12,7	15,0
Water flow-rate recovery exchanger/hot	6	l/s	1,67	1,93	2,31	2,69	3,19	3,76	4,51	5,10	5,85	6,65	7,31	7,86	8,57	9,32	10,7	12,0	13,5	15,3	16,6	19,6
Compressor																						
Type of compressors			Scroll																			
Refrigerant			R-410A																			
No. of compressors		No	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
Std Capacity control steps		No	3	3	2	3	3	3	3	2	3	3	3	3	3	3	2	3	2	3	3	2
Oil charge (C1)		l	3,0	3,0	3,0	6,0	6,0	6,0	7,0	7,0	8,0	10,1	11,5	11,0	11,0	13,1	12,6	12,6	13,0	13,0	13,0	13,0
Refrigeration circuits		No	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Refrigerant charge (C1)		Kg	6,1	6,8	7,8	10,7	11,8	14,8	16,3	18,2	22,1	26,0	28,6	29,9	31,2	33,8	37,7	42,9	44,2	48,0	50,0	52,0
Coolside exchanger																						
Type of exchanger	8		PHE																			
No. of exchangers		No	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Water content		l	3,2	3,2	4,3	4,3	5,9	5,9	7,2	7,2	9,8	9,8	9,8	13,2	13,2	13,2	17,2	17,2	23,0	23,0	33,8	33,8
Heating side exchanger																						
Type of exchanger	8		PHE																			
No. of exchangers		No	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Water content		l	4,7	4,7	4,7	6,8	7,8	7,8	10,6	10,6	10,6	14,2	14,2	14,2	18,6	18,6	18,6	25,0	25,0	27,0	42,8	47,3
Source side exchanger																						
Type of exchanger			PHE																			
No. of exchangers		No	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Water content		l	4,7	4,7	4,7	6,8	7,8	7,8	9,8	9,8	9,8	13,2	13,2	13,2	17,2	17,2	17,2	23,0	23,0	27,0	42,8	47,3
Connections																						
Water fittings			2 1/2"	2 1/2"	2 1/2"	2 1/2"	2 1/2"	2 1/2"	2 1/2"	2 1/2"	3"	3"	3"	3"	3"	3"	3"	3"	3"	3"	4"	4"
Water circuit																						
Maximum water side pressure		MPa	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0
Power supply																						
Standard power supply			400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50

The Product is compliant with the ErP (Energy Related Products) European Directive. It includes the Commission delegated Regulation (EU) No 811/2013 (rated heat output ≤ 70 kW at specified reference conditions) and the Commission delegated Regulation (EU) No 813/2013 (rated heat output ≤ 400 kW at specified reference conditions)

1. Data referred to the following conditions: User side exchanger water = 12/7 °C. Supply side exchanger water = 30/35 °C
2. The total power input is derived by adding the compressor power input + power input of the auxiliary electric circuit
3. Full-load EER, cooling efficiency coefficient. Ratio between the cooling capacity delivered and the total power input.
4. Data referred to the following conditions:
 - 1) for system with 2 pipes (system heating): user side exchanger water 40/45 °C. Source side exchanger water 10/7 °C.
 - 2) for system with 2 pipes (heating demand side recovery without cooling system side): recovery side exchanger water 40/45 °C. Source side exchanger water 10/7 °C.
 - 3) for system with 4 pipes: recovery side exchanger water 40/45 °C. Source side exchanger water 10/7 °C.

5. Full-load COP, heating efficiency coefficient. Ratio between the heating capacity delivered and the total power input.
6. Data referred to the following conditions: user side exchanger water 12/7 °C. Source side exchanger water 40/45 °C.
7. Overall efficiency. Calculated as (cooling capacity delivered + heating capacity delivered)/(total power input).
8. PHE = plate exchanger
9. Seasonal Space Heating Energy Efficiency Class according to Commission delegated Regulation (EU) No 811/2013. W = Water outlet temperature (°C)

Configuration for 2-system and 4-pipe system

General technical data - Geothermic version

Size		10.2	12.2	14.2	16.2	19.2	22.2	27.2	30.2	35.2	40.2	43.2	45.2	50.2	55.2	60.2	70.2	80.2	90.2	100.2	120.2
Cooling 100% - Heating 0%																					
Cooling capacity	1 kW	30,3	35,3	40,7	48,8	61,0	70,4	86,0	96,8	109	126	139	148	163	178	199	227	252	281	315	366
Total power input	2 kW	6,87	8,10	9,76	11,2	12,3	15,0	17,3	20,1	23,2	26,4	29,5	30,9	34,2	37,2	42,0	47,8	54,0	61,6	68,8	83,1
EER at full load	3	4,41	4,36	4,17	4,36	4,96	4,69	4,97	4,82	4,71	4,78	4,71	4,80	4,77	4,79	4,75	4,74	4,67	4,56	4,58	4,40
Water flow-rate internal exchanger/cold	1 l/s	1,45	1,69	1,94	2,33	2,91	3,36	4,11	4,62	5,22	6,02	6,64	7,09	7,80	8,51	9,52	10,8	12,1	13,4	15,0	17,5
Water flow-rate external exchanger	1 l/s	1,90	2,22	2,58	3,07	3,75	4,37	5,29	5,99	6,78	7,81	8,63	9,18	10,1	11,0	12,4	14,1	15,7	17,5	19,6	23,0
Cooling 0% - Heating 100%																					
Heating capacity	4 kW	27,4	32,1	37,4	44,5	53,0	62,1	73,4	82,9	93,3	108	118	127	138	153	170	194	214	244	263	309
Total power input	2 kW	7,96	9,08	10,6	12,3	14,4	16,9	19,8	22,6	26,1	29,7	33,2	35,2	38,2	42,3	47,9	53,0	59,1	69,7	76,0	93,1
COP at full load	5	3,44	3,54	3,53	3,62	3,68	3,67	3,71	3,67	3,57	3,65	3,57	3,62	3,62	3,61	3,54	3,65	3,61	3,50	3,46	3,32
Water flow-rate recovery exchanger/hot	4 l/s	1,31	1,53	1,79	2,13	2,53	2,97	3,51	3,96	4,46	5,17	5,66	6,09	6,61	7,29	8,10	9,25	10,2	11,6	12,6	14,8
Water flow-rate external exchanger	4 l/s	1,66	1,97	2,29	2,75	3,30	3,86	4,58	5,15	5,74	6,71	7,27	7,87	8,55	9,41	10,4	12,0	13,2	14,9	15,9	18,4
Cooling 100% - Heating 100%																					
Cooling capacity	6 kW	27,2	31,3	37,4	43,9	52,1	61,2	73,8	83,0	95,2	108	118	128	140	151	174	195	219	248	267	314
Heating capacity	6 kW	35,0	40,4	48,3	56,4	66,7	78,8	94,4	107	123	139	153	165	179	195	223	251	282	321	347	411
Total power input	2 kW	7,75	9,12	10,9	12,5	14,6	17,6	20,6	23,8	27,3	31,1	34,5	36,7	39,7	43,9	49,1	55,8	63	72,1	80,4	96,8
Overall efficiency	7	8,03	7,86	7,86	8,02	8,14	7,95	8,16	7,98	7,97	7,95	7,86	7,97	8,03	7,88	8,10	7,99	7,96	7,89	7,63	7,48
Water flow-rate internal exchanger/cold	6 l/s	1,30	1,49	1,79	2,10	2,49	2,92	3,52	3,97	4,55	5,16	5,66	6,11	6,67	7,22	8,33	9,32	10,5	11,9	12,7	15,0
Water flow-rate recovery exchanger/hot	6 l/s	1,67	1,93	2,31	2,69	3,19	3,76	4,51	5,10	5,85	6,65	7,31	7,86	8,57	9,32	10,7	12,0	13,5	15,3	16,6	19,6
Compressor																					
Type of compressors																					
Refrigerant																					
No. of compressors	No	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
Std Capacity control steps	No	3	3	2	3	3	3	3	2	3	3	3	3	3	3	2	3	2	3	3	2
Oil charge (C1)	l	3,0	3,0	3,0	6,0	6,0	6,0	7,0	7,0	8,0	10,1	11,5	11,0	11,0	13,1	12,6	12,6	12,6	13,0	13,0	13,0
Refrigeration circuits	No	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Refrigerant charge (C1)	Kg	6,1	6,8	7,8	10,7	11,8	14,8	16,3	18,2	22,1	26,0	28,6	29,9	31,2	33,8	37,7	42,9	44,2	48,0	50,0	52,0
Coolside exchanger																					
Type of exchanger	8																				
No. of exchangers	No	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Water content	l	3,2	3,2	4,3	4,3	5,9	5,9	7,2	7,2	9,8	9,8	9,8	13,2	13,2	13,2	17,2	17,2	23,0	23,0	33,8	33,8
Heating side exchanger																					
Type of exchanger	8																				
No. of exchangers	No	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Water content	l	4,7	4,7	4,7	6,8	7,8	7,8	10,6	10,6	10,6	14,2	14,2	14,2	18,6	18,6	18,6	25,0	25,0	27,0	42,8	47,3
Source side exchanger																					
Type of exchanger	8																				
No. of exchangers	No	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Water content	l	4,70	4,70	4,70	6,80	7,80	7,80	14,0	14,0	14,0	18,0	18,0	21,0	21,0	26,0	26,0	30,0	30,0	30,0	42,8	47,3
Connections																					
Water fittings	9	2 1/2"	2 1/2"	2 1/2"	2 1/2"	2 1/2"	2 1/2"	2 1/2"	2 1/2"	3"	3"	3"	3"	3"	3"	3"	3"	3"	3"	4"	4"
Water circuit																					
Maximum water side pressure	MPa	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0	1,0
Power supply																					
Standard power supply			400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50

1. Data referred to the following conditions: User side exchanger water = 12/7 °C. Supply side exchanger water = 30/35 °C

2. The total power input is derived by adding the compressor power input + power input of the auxiliary electric circuit

3. Full-load EER, cooling efficiency coefficient. Ratio between the cooling capacity delivered and the total power input.

4. Data referred to the following conditions:

1) for system with 2 pipes (system heating): user side exchanger water 40/45 °C. Source side exchanger water 10/7 °C.

2) for system with 2 pipes (heating demand side recovery without cooling system side): recovery side exchanger water 40/45 °C. Source side exchanger water 10/7 °C.

3) for system with 4 pipes: recovery side exchanger water 40/45 °C. Source side exchanger water 10/7 °C.

5. Full-load COP, heating efficiency coefficient. Ratio between the heating capacity delivered and the total power input.

6. Data referred to the following conditions: user side exchanger water 12/7 °C. Source side exchanger water 40/45 °C.

7. Overall efficiency. Calculated as (cooling capacity delivered + heating capacity delivered)/(total power input).

8. PHE = plate exchanger

Configuration for 2-system and 4-pipe system

Sound levels

Size	Sound power level (dB)								Sound power level	Sound pressure level
	Octave band (Hz)									
	63	125	250	500	1000	2000	4000	8000	dB(A)	dB(A)
10.2	78	70	62	52	52	43	41	40	60	44
12.2	78	69	62	56	52	44	43	38	60	44
14.2	78	67	61	57	54	46	44	39	60	45
16.2	78	71	66	63	53	49	46	41	64	49
19.2	78	73	67	63	55	51	47	42	65	49
22.2	78	73	65	62	55	52	47	42	64	49
27.2	78	73	66	62	56	54	49	44	64	49
30.2	78	74	63	60	56	54	48	44	64	49
35.2	81	83	80	67	61	61	52	45	74	58
40.2	81	79	80	67	65	63	55	50	74	58
43.2	81	83	83	69	66	65	56	49	77	60
45.2	81	78	80	69	66	62	55	48	74	58
50.2	81	83	83	70	67	64	56	47	77	60
55.2	81	80	83	70	68	65	57	50	77	60
60.2	81	80	83	71	69	65	57	50	77	61
70.2	82	80	85	73	72	68	60	51	79	63
80.2	82	80	85	73	74	70	61	52	80	63
90.2	83	81	86	74	75	71	62	53	81	64
100.2	83	81	86	74	75	71	62	53	81	64
120.2	84	82	87	75	76	72	63	54	82	65

Sound levels refer to units with full load under nominal test conditions.

The sound pressure level refers to a distance of 1 meter from the outer surface of the unit operating in open field.

Noise levels are determined using the tensiometric method (UNI EN ISO 9614-2)

Data referred to the following conditions:


entering / leaving exchanger water temperature user side 12/7°C

entering / leaving exchanger water temperature source side 30/35°C


Configuration for 2-pipe system and 4-pipe system

Operating range - Cooling


Size 10.2 - 12.2 - 14.2

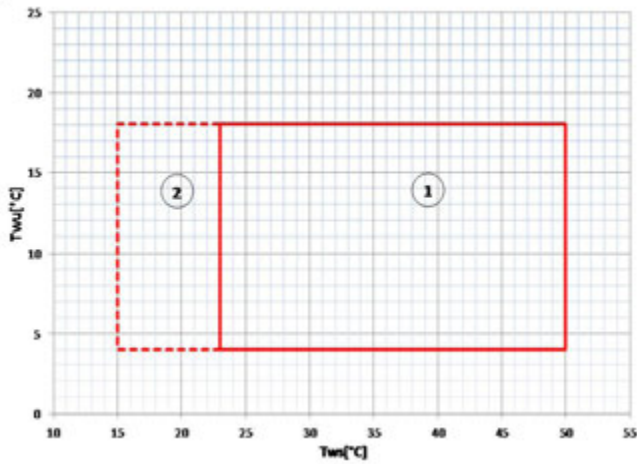


Size 16.2

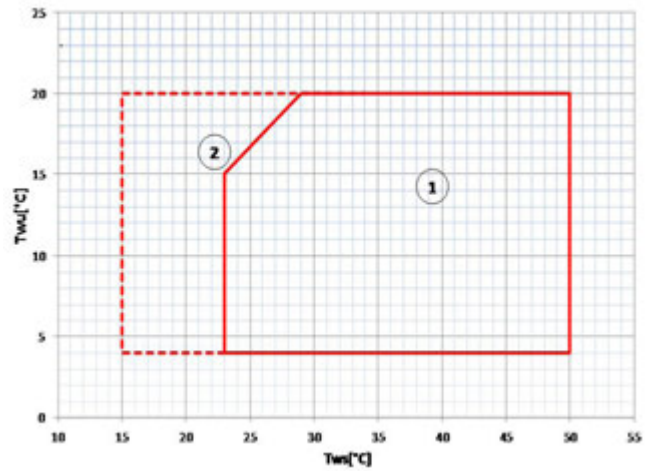

Size 19.2-22.2-27.2-30.2-35.2-40.2-45.2

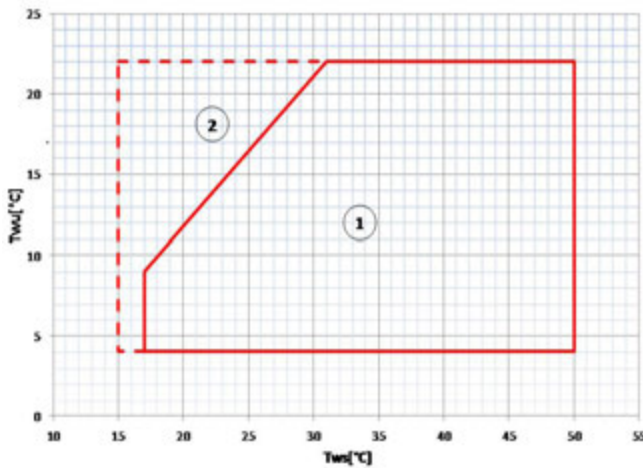

Sizes 43.2-50.2-55.2-60.2-70.2-80.2-90.2-100.2-120.2

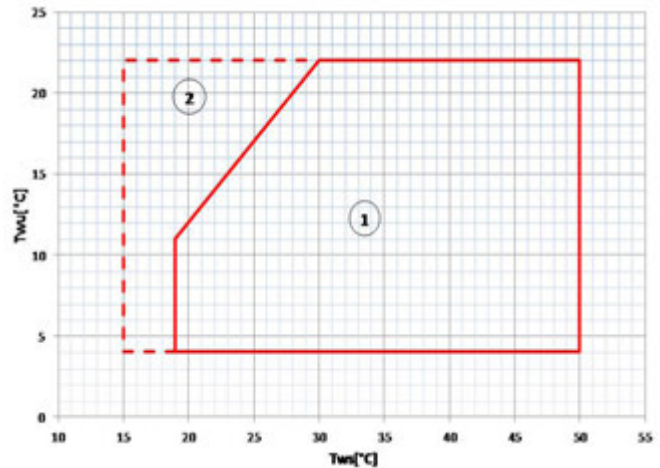

T_{wu} [°C] = leaving water temperature user side

T_{ws} [°C] = leaving water temperature source side


The limits refer to $\Delta T=5$ °C on both the service and source sides

- 1 Normal operating range
2. Operating range with modulating valve or inverter pump on source side in regulation mode (optional configurations)


Configuration for 2-pipe system and 4-pipe system

Operating range - Heating - Groundwater


Size 10.2 - 12.2 - 14.2

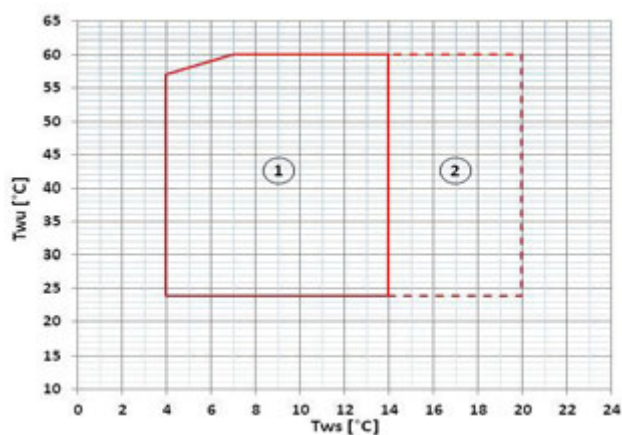


Size 16.2

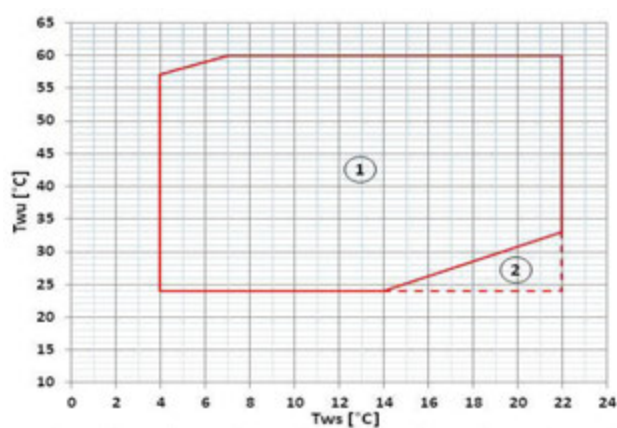

Size 19.2-22.2-27.2-30.2-35.2-40.2-45.2

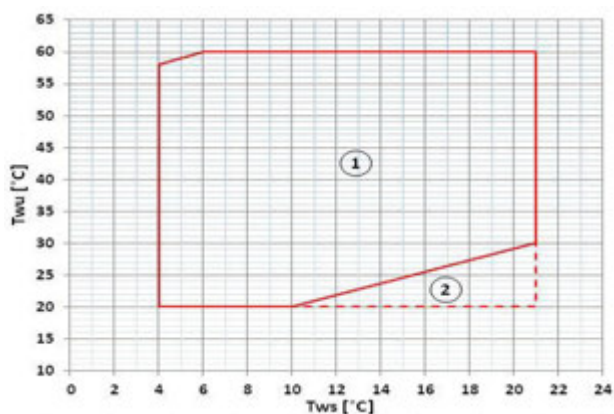

Sizes 43.2-50.2-55.2-60.2-70.2-80.2-90.2-100.2-120.2

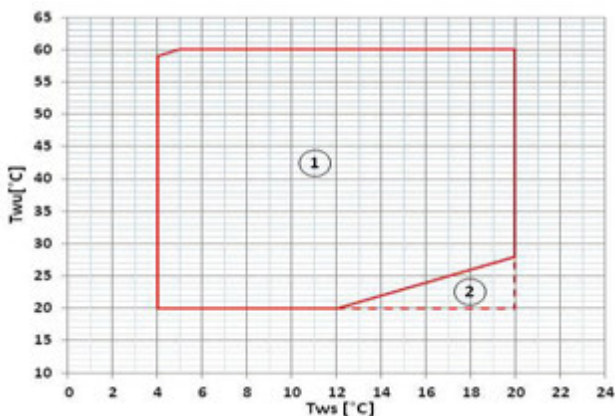

T_{wu} [°C] = leaving water temperature user side

T_{ws} [°C] = leaving water temperature source side


The limits refer to $DT=5$ °C on both the service and source sides

1. Normal operating range
2. Operating range where it is obligatory the use of water and glycol mixture depending on the outlet water temperature from the heat exchanger source side


Configuration for 2-pipe system and 4-pipe system

Operating range - Heating - Geothermal


Size 10.2 - 12.2 - 14.2

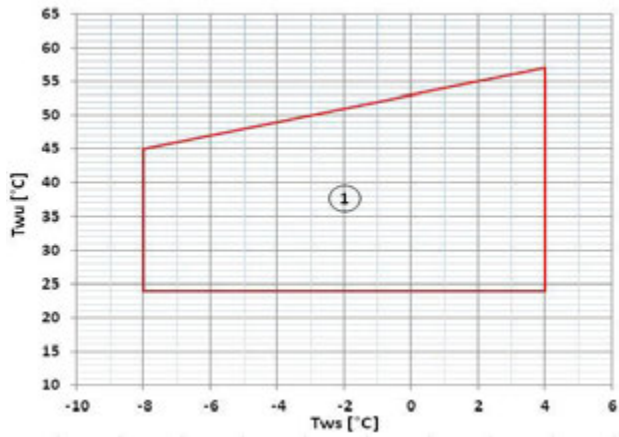


Size 16.2

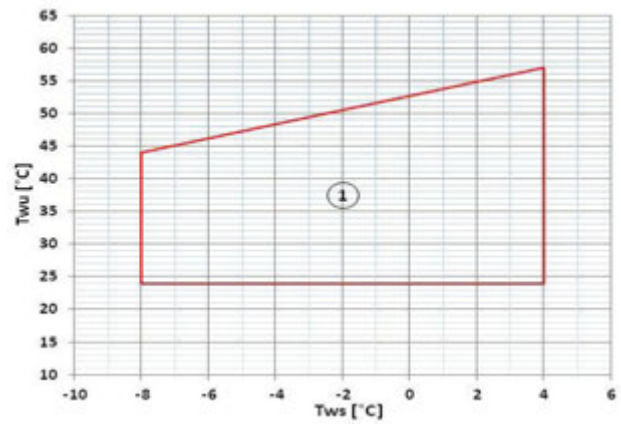

Size 19.2-22.2-27.2-30.2-35.2-40.2-45.2

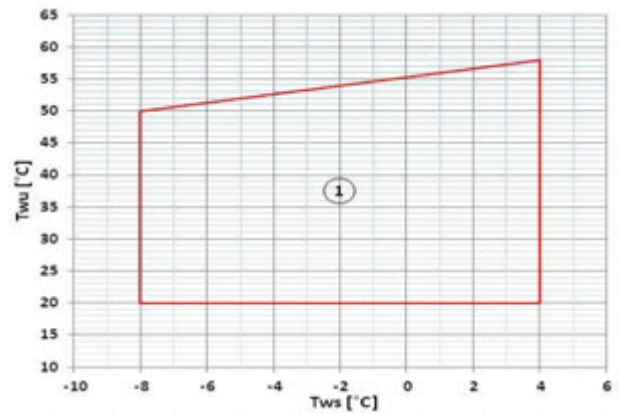

Sizes 43.2-50.2-55.2-60.2-70.2-80.2-90.2-100.2-120.2

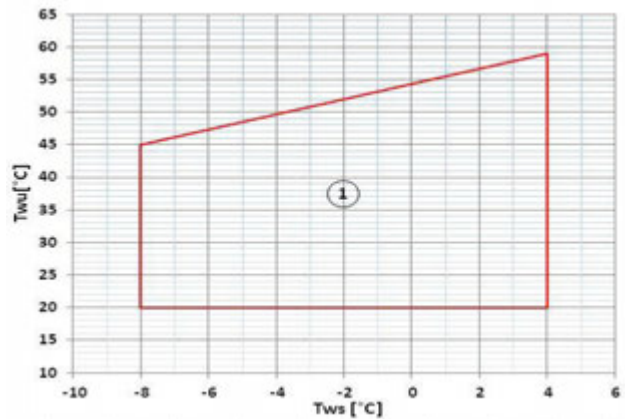


T_{wu} [°C] = leaving water temperature user side
 T_{ws} [°C] = leaving water temperature source side
 The limits refer to $DT=5$ °C on both the service and source sides

1. Operating range with modulating valve or inverter pump on source side in regulation mode (optional configurations)


Configuration for 2-pipe system and 4-pipe system

Operating range - Cooling 100% - Heating 100%


Size 10.2 - 12.2 - 14.2

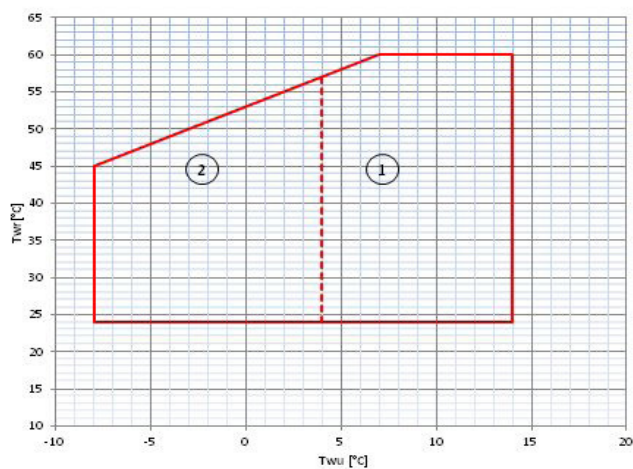


Size 16.2

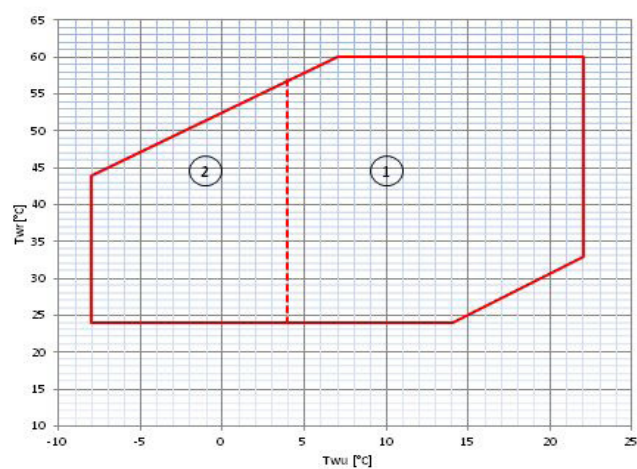

Size 19.2-22.2-27.2-30.2-35.2-40.2-45.2

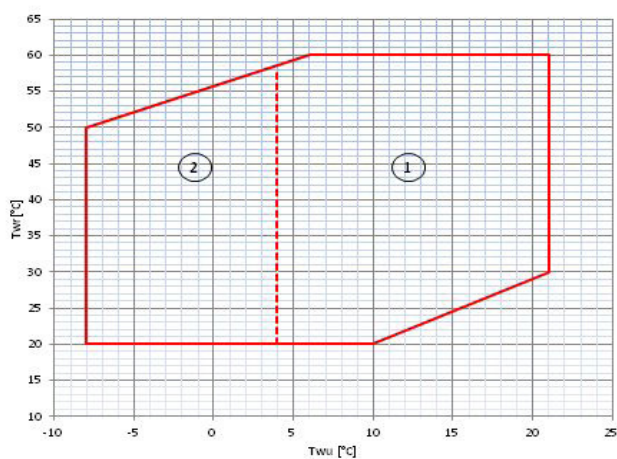

Sizes 43.2-50.2-55.2-60.2-70.2-80.2-90.2-100.2-120.2

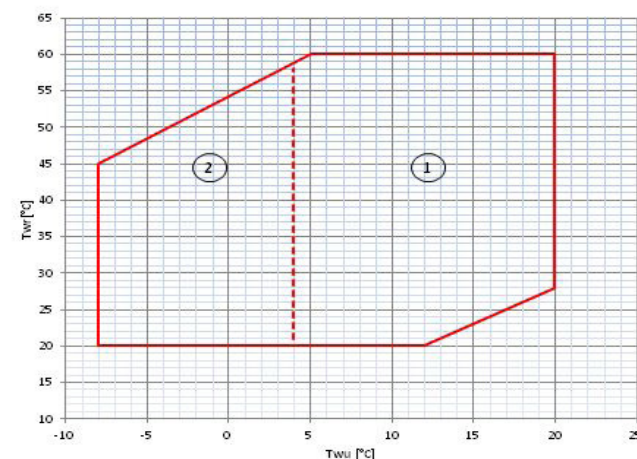

T_{wu} [°C] = leaving water temperature user side

T_{ws} [°C] = leaving water temperature source side

The limits refer to $\Delta T=5$ °C on both the service and source sides

1. Normal operating range
2. Operating range where it is obligatory the use of water and glycol mixture depending on the outlet water temperature from the heat exchanger source side
3. Operating range with modulating valve or inverter pump on source side in regulation mode (optional configurations)

Admissible water flow rates

Min. (Qmin) and max. (Qmax) water flow-rates admissibles for the correct unit operation.

SIZE			10.2	12.2	14.2	16.2	19.2	22.2	27.2	30.2	35.2	40.2	43.2	45.2	50.2	55.2	60.2	70.2	80.2	90.2	100.2	120.2
Recovery side	Qmin	[l/s]	0,8	0,8	0,8	1,0	1,1	1,1	1,8	1,8	1,8	2,4	2,4	2,4	2,9	2,9	2,9	3,8	3,8	5,3	9,5	10,5
	Qmax	[l/s]	4,2	4,2	4,3	4,8	4,9	5,1	8,8	8,8	9,3	11,4	11,9	12,2	14,4	15	15,4	18,3	19,0	23,5	28,0	29,0
Source side	Qmin	[l/s]	0,8	0,8	0,8	1,0	1,1	1,1	2,2	2,2	2,2	2,9	2,9	2,9	3,6	3,6	3,6	4,3	4,3	5,3	9,5	10,5
	Qmax	[l/s]	4,2	4,2	4,3	4,8	4,9	5,1	11	11,5	11,5	14,4	14,7	15	17,7	18,0	18,5	21,3	21,7	23,0	28,0	30,0
User side	Qmin	[l/s]	0,8	0,8	0,8	1,0	1,1	1,1	1,9	1,9	2,6	2,6	2,6	3,5	3,5	3,5	4,5	4,5	5,0	5,0	8,5	8,5
	Qmax	[l/s]	3,5	3,5	4,3	4,4	4,9	5,1	8,5	8,5	11,5	11,5	11,5	14,5	14,5	15,0	18,0	18,5	21,5	22,0	27,0	27,0


Overload and control device calibrations

		Open	Closed	Value
High pressure switch (gas side)	[kPa]	4050	3300	—
Low pressure alarm (gas side)	[kPa]	450	600	—
Antifreeze protection	[°C]	4,0	6,0	—
high pressure safety valve (gas side)	[kPa]	—	—	4500
Low pressure safety valve (gas side)	[kPa]	—	—	3000
Max no. of compressor starts per hour (gas side)	[No]	—	—	10
Differential pressure switch (water side)	[kPa]	3	5	-
Max. pressure without hydronic assembly (water side)	[kPa]	-	-	1000
Max. pressure with hydronic assembly (water side)	[kPa]	-	-	600
Safety valve calibration (water side) (1)	[kPa]	-	-	600

(1) Available only with hydronic assembly option

Dimensional drawings

WSHN-XEE MF sizes 10.2 - 30.2

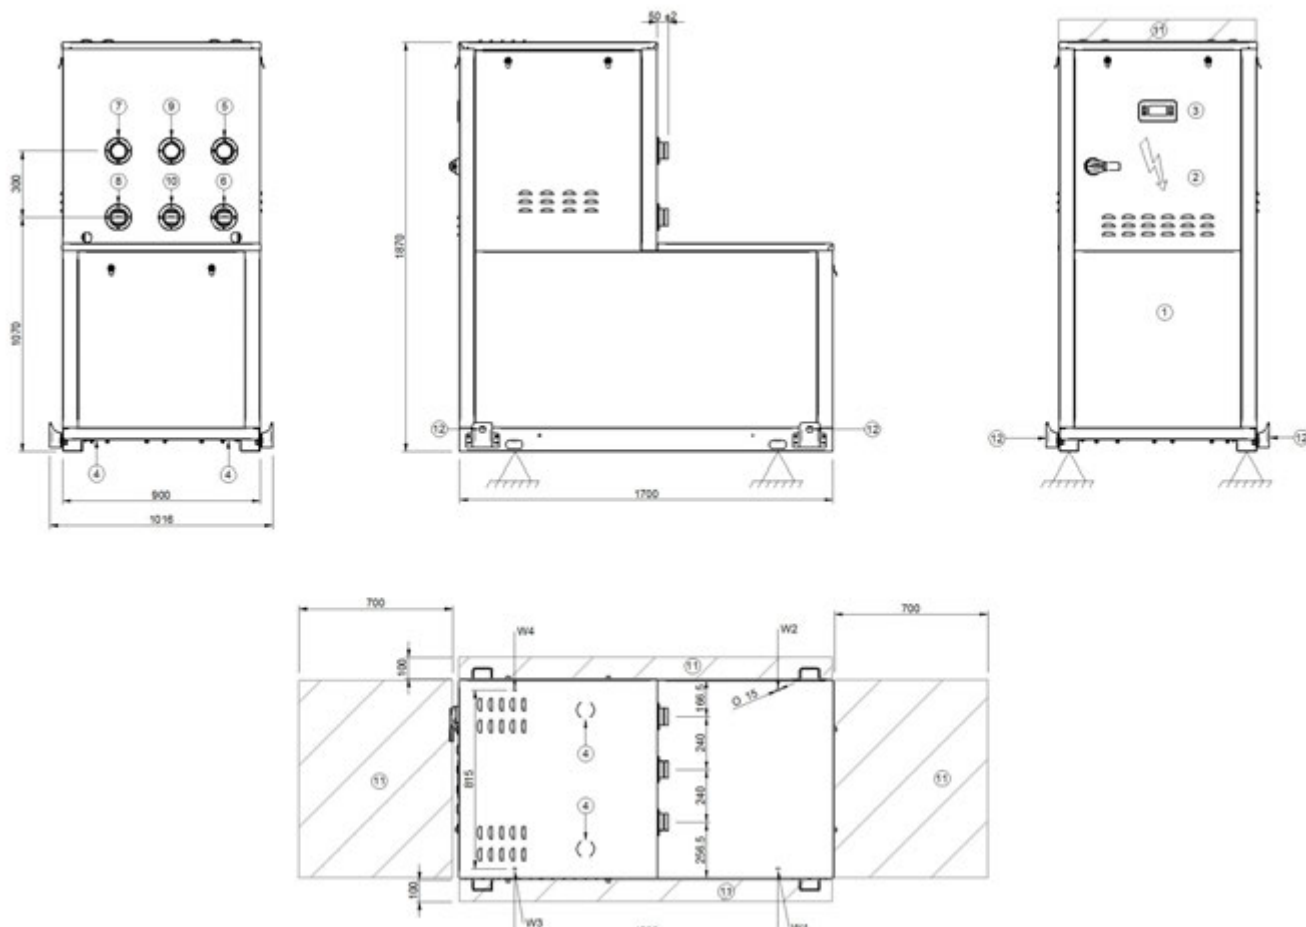


1. Compressor compartment
2. Electrical panel
3. Unit control keypad
4. Power input
5. Source side water return
6. Source side water supply
7. User side water return
8. User side water supply
9. Recovery side water return
10. Recovery side water supply
11. Functional spaces
12. Lifting brackets (removable)

Size		10.2	12.2	14.2	16.2	19.2	22.2	27.2	30.2
Length	mm	900	900	900	900	900	900	900	900
Height	mm	1870	1870	1870	1870	1870	1870	1870	1870
Depth	mm	1700	1700	1700	1700	1700	1700	1700	1700
Operating weight	kg	403	403	400	471	491	497	550	555
Shipping weight	kg	364	364	361	419	433	439	489	494

The presence of optional accessories may result in a substantial variation of the weights shown in the table.

Dimensional drawings

WSHN-XEE MF sizes 35.2 - 80.2

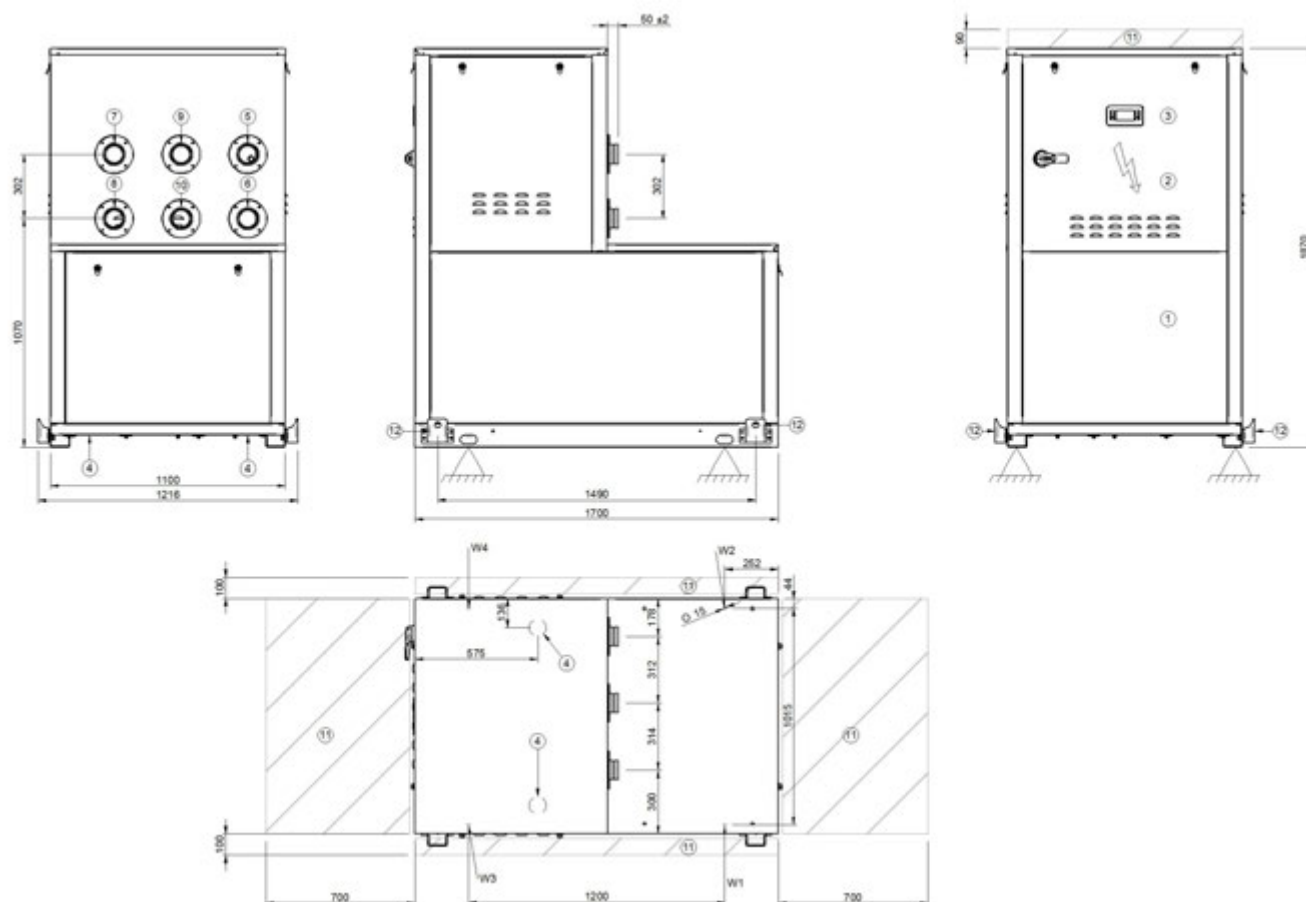


1. Compressor compartment
2. Electrical panel
3. Unit control keypad
4. Power input
5. Source side water return
6. Source side water supply
7. User side water return
8. User side water supply
9. Recovery side water return
10. Recovery side water supply
11. Functional spaces
12. Lifting brackets (removable)

Size		35.2	40.2	43.2	45.2	50.2	55.2	60.2	70.2	80.2
Length	mm	1100	1100	1100	1100	1100	1100	1100	1100	1100
Height	mm	1870	1870	1870	1870	1870	1870	1870	1870	1870
Depth	mm	1700	1700	1700	1700	1700	1700	1700	1700	1700
Operating weight	kg	656	721	816	754	901	924	941	1045	1056
Shipping weight	kg	595	650	729	667	801	824	841	927	938

The presence of optional accessories may result in a substantial variation of the weights shown in the table.

Dimensional drawings

WSHN-XEE2 MF sizes 90.2 - 120.2

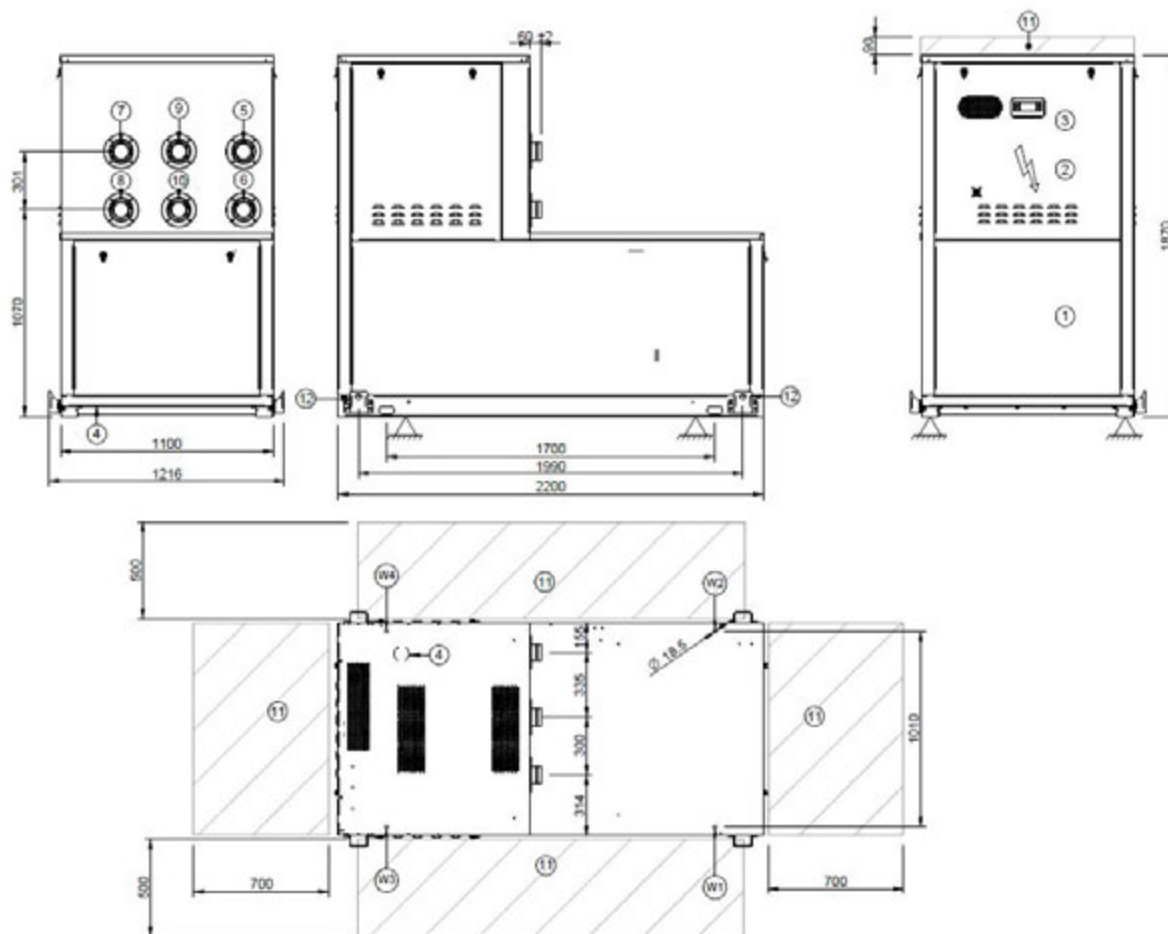

1. Compressor compartment
2. Electrical panel
3. Unit control keypad
4. Power input
5. Source side water return
6. Source side water supply
7. User side water return
8. User side water supply
9. Recovery side water return
10. Recovery side water supply
11. Functional spaces
12. Lifting brackets (removable)

Size		90.2	100.2	120.2
Length	mm	1100	1100	1100
Height	mm	1870	1870	1870
Depth	mm	2200	2200	2200
Operating weight	kg	1186	1412	1539
Shipping weight	kg	1038	1188	1238

The presence of optional accessories may result in a substantial variation of the weights shown in the table.

Page intentionally left blank

**CLIVET SPA**

Via Camp Lonc 25, Z.I. Villapaiera - 32032 Feltre (BL) - Italy
Tel. + 39 0439 3131 - Fax + 39 0439 313300 - info@clivet.it

CLIVET UK LTD (Sales)

4 Kingdom Close, Segensworth East - Fareham, Hampshire - PO15 5TJ - United Kingdom
Tel. + 44 (0) 1489 572238 - Fax + 44 (0) 1489 573033 - info@clivet-uk.co.uk

CLIVET AIRCON LTD (Service and Maintenance Division)

Units F5&F6 Railway Triangle Ind Est, Walton Road - Portsmouth, Hampshire - PO6 1TG - United Kingdom
Tel. +44 (0) 2392 381235 - Fax. +44 (0) 2392 381243 - info@clivetaircon.co.uk

CLIVET ESPAÑA S.A.U.

C/ Bac de Roda, 36 - 08019 Barcelona - España
Tel: +34 93 8606248 - Fax +34 93 8855392 - info@clivet.es

Av.Manóteras Nº 38, Oficina C303 - 28050 Madrid - España
Tel. +34 91 6658280 - Fax +34 91 6657806 - info@clivet.es

CLIVET GmbH (Hydronic and Applied Division)

Hummelsbütteler Steindamm 84, 22851 Norderstedt - Germany
Tel. + 49 (0) 40 32 59 57-0 - Fax + 49 (0) 40 32 59 57-194 - info.de@clivet.com

CLIVET GmbH (VRF, Residential and Lightcom Division)

Eisenstrasse 9c, 65428 Rüsselsheim/Frankfurt - Germany
Tel. + 49 (0) 6142 83594-0 - Fax + 49 (0) 6142 83594-20 - vrf.de@clivet.com

CLIVET RUSSIA

Elektrozavodskaya st. 24, office 509 - 107023, Moscow, Russia
Tel. + 74956462009 - Fax + 74956462009 - info.ru@clivet.com

CLIVET MIDEAST FZCO

Dubai Silicon Oasis (DSO), High Bay Complex, Office N. 20, PO BOX 342009, Dubai, UAE
Tel. + 9714 3208499 - Fax + 9714 3208216 - info@clivet.ae

CLIVET AIRCONDITIONING SYSTEMS PRIVATE LIMITED

4BA, Gundecha Onclave, Kherani Road - Sakinaka, Andheri (East) - Mumbai 400 072 - India
Tel. +91 22 6193 7000 - Fax +91 22 6193 7001 - info.in@clivet.com

www.clivet.com
www.clivetlive.com